














 

 








 
 















Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 i	 Info / Angle
 0/AV	 0
 Mute	 Mute / Dimmer
 Up	 Up
 P+	 CH+ / Page+
 Right	 Right
 Vol+	 Vol+

Original	Rechange
 Vol-	 Vol-
 Left	 Left
 OK	 OK
 P-	 CH- / Page-
 Down	 Down
 A/B	 Shift + Yellow / YouTube /
 TXT	 Text / Goto
 Red/Picture	 Red / Netflix / Search
 Green/Timer	 Green / APP / Repeat
 Yellow/Format	 Yellow / YouTube / Repeat
 Blue/Audio	 Blue / Prime Video / Random
 Peri	 Smart / List
 Brightness/DX-	 I<< / Preset-
 Brightness/DX+	 >>I / Preset+





Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 i	 Info / Angle
 0/AV	 0
 Mute	 Mute / Dimmer
 Up	 Up
 P+	 CH+ / Page+
 Right	 Right
 Vol+	 Vol+

Original	Rechange
 Left	 Left
 Vol-	 Vol-
 OK	 OK
 Down	 Down
 P-	 CH- / Page-
 A/B	 Shift + Yellow / YouTube /
 TXT	 Text / Goto
 Red/Picture	 Red / Netflix / Search
 Green/Timer	 Green / APP / Repeat
 Yellow/Format	 Yellow / YouTube / Repeat
 Blue/Audio	 Blue / Prime Video / Random
 Brightness/DX-	 I<< / Preset-
 Brightness/DX+	 >>I / Preset+






 


 





































 
	Original	Recharge
	Power	Power
	Rec	Rec / Rec Mode
	Stop	Stop / Hold
	Pause	Pause / Step / Freeze
	P+	CH+ / Page+
	>>	>> / Tune+
	<<	<< / Tune-
	Play	Play / Slow
	P-	CH- / Page-
	A/B	Yellow / YouTube / Repeat
	TXT	Text / Goto

Original	Recharge





Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 i	 Info / Angle
 0/AV	 0
 Mute	 Mute / Dimmer
 Up	 Up
 P+	 CH+ / Page+
 Right	 Right
 Vol+	 Vol+

Original	Rechange
 Left	 Left
 Vol-	 Vol-
 OK	 OK
 Down	 Down
 P-	 CH- / Page-
 A/B	 Shift + Yellow / YouTube /
 TXT	 Text / Goto
 Red/Picture	 Red / Netflix / Search
 Green/Timer	 Green / APP / Repeat
 Yellow/Format	 Yellow / YouTube / Repeat
 Blue/Audio	 Blue / Prime Video / Random
 Peri	 Smart / List
 Brightness/DX-	 I<< / Preset-
 Brightness/DX+	 >>I / Preset+

