



| Original | | Recharge | | Original | | Recharge | |
|----------|----------|----------|---------------------------|----------|------------------|----------|-------------------------|
| | Power | | Power | | 9 | | 9 |
| | Sleep | | Sleep / Timer | | EPG | | Guide / EPG / -/- |
| | Screen | | Picture / Format | | 0 | | 0 |
| | Presets | | Setup / OPT / | | Swap | | Fav / Marker / PC |
| | ↔ | | TV/Radio / | | Photo/Music/Movi | | D.Menu / Top |
| | FAV | | Shift + Fav / Marker / PC | | World | | Smart / List |
| | Lang | | Audio / Lang I/II | | Source | | AV / Input / RDS |
| | Subtitle | | Subtitle / EQ | | Menu | | Menu / Home |
| | TXT | | Text / Goto | | Up | | Up |
| | 1 | | 1 | | Left | | Left |
| | 2 | | 2 | | OK | | OK |
| | 3 | | 3 | | Right | | Right |
| | 4 | | 4 | | Down | | Down |
| | 5 | | 5 | | C | | Exit / Cancel / Clear |
| | 6 | | 6 | | Disp. | | Display / Media |
| | 7 | | 7 | | Search Mode | | Shift + Red / Netflix / |
| | 8 | | 8 | | Return | | Back / Return |





| Original | Recharge | Original | Recharge |
|----------|------------------------|----------|-----------------------------|
| | CH+ | | Yellow/Root |
| | Info | | Blue/Title |
| | Vol+ | | |
| | CH- | | |
| | Mute | | |
| | Vol- | | |
| | Rec | | |
| | Pause | | |
| | I<< | | |
| | >>I | | |
| | << | | |
| | Play | | |
| | Stop | | |
| | >> | | |
| | Red/↑/Zoom | | |
| | Red/↑/Zoom | | |
| | Green/↓/Repeat | | |
| | CH+ / Page+ | | Yellow / YouTube / Repeat |
| | Info / Angle | | Blue / Prime Video / Random |
| | Vol+ | | |
| | CH- / Page- | | |
| | Mute / Dimmer | | |
| | Vol- | | |
| | Rec / Rec Mode | | |
| | Pause / Step / Freeze | | |
| | I<< / Preset- | | |
| | >>I / Preset+ | | |
| | << / Tune- | | |
| | Play / Slow | | |
| | Stop / Hold | | |
| | >> / Tune+ | | |
| | Red / Netflix / Search | | |
| | Zoom / Size | | |
| | Green / APP / Repeat | | |

