















 


















































Original	Rechange
AVR Power On	 Power
Mute	 Mute / Dimmer
Play	 Play / Slow
Pause	 Pause / Step / Freeze
Stop	 Stop / Hold
<<	 << / Tune-
>>	 >> / Tune+
I<<	 I<< / Preset-
>>I	 >>I / Preset+
Audio Effects	 Audio / Lang I/II
Surround Modes	 Eject / Surround
Video Modes	 Picture / Format
Sleep	 Sleep / Timer
Menu	 Menu / Home
Up	 Up
Info	 Info / Angle
Left	 Left

Original	Rechange
OK	 OK
Right	 Right
Back/Exit	 Exit / Cancel / Clear
Down	 Down
Last	 Back / Return
Vol+	 Vol+
AVR	 Smart / List
CH/Page Up	 CH+ / Page+
Vol-	 Vol-
CH/Page Down	 CH- / Page-
1	 1
2	 2
3	 3
4	 4
5	 5
6	 6
7	 7










 







	Original	Recharge	Original	Recharge
	8	 8		 +  Shift + 0
	9	 9		
	0	 0		
	Red	 SEARCH		Red / Netflix / Search
	Green	 REPEAT		Green / APP / Repeat
	Yellow	 REPEAT A-B		Yellow / YouTube / Repeat
	Blue	 RANDOM		Blue / Prime Video / Random
	AVR Power Off	 + 		Shift + Power
	Tv	 +  1		Shift + 1
	Blu-ray	 +  2		Shift + 2
	DVR	 +  3		Shift + 3
	iPod	 +  4		Shift + 4
	Network	 +  5		Shift + 5
	Radio	 +  6		Shift + 6
	AUX	 +  7		Shift + 7
	Game	 +  8		Shift + 8
	Media Server	 +  9		Shift + 9























Original	Recharge	Original	Recharge
1	 1		
DVR	 Display / Media		
DVR Power On	 Power		
2	 2		
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
0	 0		
Menu	 Menu / Home		
Up	 Up		
Down	 Down		
Right	 Right		
Left	 Left		

Original	Recharge	Original	Recharge
Mute	 Mute / Dimmer		
Vol+	 Vol+		
Vol-	 Vol-		
CH/Page Up	 CH+ / Page+		
CH/Page Down	 CH- / Page-		





Original	Recharge	Original	Recharge
Bluray Power		Power	
Mute		Mute / Dimmer	
Play		Play / Slow	
Pause		Pause / Step / Freeze	
Stop		Stop / Hold	
Rec		Rec / Rec Mode	
<<		<< / Tune-	
>>		>> / Tune+	
I<<		I<< / Preset-	
>>I		>>I / Preset+	
Disc Menu		D.Menu / Top	
Menu		Menu / Home	
Up		Up	
Left		Left	
OK		OK	
Right		Right	
Back/Exit		Exit / Cancel / Clear	

Original	Recharge	Original	Recharge
Down		Down	
Last		Back / Return	
Vol+		Vol+	
Vol-		Vol-	
Blu-ray		Display / Media	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0		0	
Red		Red / Netflix / Search	
Green		Green / APP / Repeat	





	Original	Recharge	Original	Recharge
	Yellow	Yellow / YouTube / Repeat		
	Blue	Blue / Prime Video / Random		
	Bluray Power Off	+ Shift + Power		





Original	Recharge
AVR Power On	Power
AVR Power Off	Shift + Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Menu	Menu / Home
Back/Exit	Exit / Cancel / Clear
Last	Back / Return
Up	Up
Down	Down

Original	Recharge
Right	Right
Left	Left
OK	OK
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Vol+	Vol+
Vol-	Vol-
Mute	Mute / Dimmer
CH/Page Up	CH+ / Page+
CH/Page Down	CH- / Page-
Pause	Pause / Step / Freeze
I<<	I<< / Preset-
>>I	>>I / Preset+
Play	Play / Slow
<<	<< / Tune-





Original	Recharge
>>	>> / Tune+
Stop	Stop / Hold
Rec	Rec / Rec Mode
Info	Info / Angle
Sleep	Sleep / Timer
AVR	Smart / List
Audio Effects	Audio / Lang I/II
Video Modes	Picture / Format
Surround Modes	Eject / Surround
Cable/SAT	Shift + 0
Blu-ray	Shift + 2
iPod	Shift + 4
Radio	Shift + 6
TV	Shift + 1
AUX	Shift + 7
DVR	Shift + 3
Game	Shift + 8

Original	Recharge
Media Server	Shift + 9
Network	Shift + 5

