



Original	Recharge	Original	Recharge
On	Power	Left	Left
Off	Shift + Power	1	1
Tone	List	2	2
Vol+	Vol +	3	3
Vol-	Vol -	4	4
Mute	Mute	5	5
Test	Smart	6	6
Night	Exit	7	7
DIM / [≡]	Text	8	8
Sleep	Sleep	9	9
SPKR/Menu	Menu	0	0
Delay/Prev. CH.	Info	Mem/[≡♦]	Pre Ch
CH./[≡?]	TV/R	Tun-M/[≡+]	Guide
Digital/[≡X]	Media	Tuning ▲	Ch +
Up	Up	Tuning ▼	Ch -
Down	Down	Direct/Green	Green
Right	Right	Clear/Yellow	Yellow





Original	Recharge
Preset ▲	Shift + Ch +
Preset ▼	Shift + Ch -
OSD	Back
RDS	Options
OK	Ok
Red	Red
Blue	Blue
AVR	Shift + 1
DVD	Shift + 2
CD	Shift + 3
Tape	Shift + 4
VID1	Shift + 5
VID2	Shift + 6
AUX	Shift + 7
HDMI1	Shift + Red
HDMI2	Shift + Green
HDMI3	Shift + Yellow

Original	Recharge
AM/FM	Shift + 9
> DVD icon"/> > DVD	Play
<< DVD icon"/> << DVD	<<
>> DVD icon"/> >> DVD	>>
Stop DVD	Stop
Pause DVD	Pause
I<</Skip Down	I<<
Skip Up/>>I	>>I

