
 






























 




Original	Recharge
 Power On	 Power
 Power Off	 Shift + Power
 Mute	 Mute
 Stereo	 Shift + Dual
 Cable/Sat	 Green
 TV	 Blue
 CD	 Yellow
 Menu	 Menu
 Harman Volume	 Smart
 Exit	 Exit
 Tone Control	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 1	 1

Original	Recharge
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Shift + Exit
 Direct	 Guide
 Vol+	 Vol +
 Vol-	 Vol -
 CH/Tuner Up	 Ch +
 CH/Tuner Down	 Ch -
 Speaker 1	 Options
 Speaker 2	 Dual





Original	Recharge
 Sleep	 Sleep
 Dim	 TV/R
 P.Scan	 Text
 A.Preset	 AV
 MEM	 Format
 RDS	 Subt
 Prev.CH	 Pre Ch
 I<	 I<<
 <<	 <<
 >>	 >>
 >I	 >>I
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 Phono	 Shift + 1
 FM/AM	 Shift + 2
 USB	 Shift + 3

Original	Recharge
 Bluetooth	 Shift + 4
 vTuner	 Shift + 5
 Network	 Shift + 6
 AUX	 Shift + 7
 Digital	 Shift + 8





Original		Rechange		Original		Rechange	
	Power On		Power		Cable/Sat		Green
	Power Off	+	Shift + Power		CD		Yellow
	Left		Left		TV		Blue
	Right		Right		Mute		Mute
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Vol+ Stereo		Vol +				
	Vol- Stereo		Vol -				
	Stereo		Dual				





Original		Rechange		Original		Rechange	
	Power On		Power		2		2
	Power Off		Shift + Power		3		3
	Mute		Mute		4		4
	Stereo		Shift + Dual		5		5
	Cable/SAT		Green		6		6
	TV		Blue		7		7
	CD		Yellow		8		8
	Menu		Menu		9		9
	Harman Volume		Smart		0		0
	Exit		Exit		Clear		Shift + Exit
	Tone Control		Back		Direct		Guide
	Up		Up		Vol+ Stereo		Vol +
	Down		Down		Vol- Stereo		Vol -
	Right		Right		CH/Tuner Down		Ch +
	Left		Left		CH/Tuner Up		Ch -
	OK		Ok		Speaker 1		Options
	1		1		Speaker 2		Dual





Original		Rechange		Original		Rechange	
	Sleep		Sleep				
	DIM		TV/R				
	P.Scan		Text				
	A.Preset		AV				
	MEM		Format				
	RDS		Subt				
	Prev.CH		Pre Ch				
	I<		I<<				
	<<		<<				
	>>		>>				
	>I		>>I				
	Stop		Stop				
	Play		Play				
	Pause		Pause				

