



Original	Rechange
On	Power
Off	+ Shift + Power
Mute	Mute / Dimmer
AVR	+ Shift + Smart / List
DVD	+ Shift + 2
VID1	+ Shift + 1
HDMI1	+ Shift + Guide / EPG / -/-
AM/FM	+ Shift + 6
CD	+ Shift + 3
VID2	+ Shift + 4
HDMI2	+ Shift + 0
AUX	+ Shift + 7
Tape	+ Shift + 5
VID3	+ Shift + 8
HDMI3	+ Shift + Fav / Marker / PC
Sleep	Sleep / Timer
6CH	+ Shift + 9

Original	Rechange
Vol+	Vol+
Surr.	Eject / Surround
Test	Text / Goto
Vol-	Vol-
CH.	Guide / EPG / -/-
Up	Up
SPKR	Menu / Home
Left	Left
OK	OK
Right	Right
Digital	Picture / Format
Down	Down
Delay	Fav / Marker / PC
1	1
2	2
3	3
4	4





Original	Rechange
	5
	6
	7
	8
	Smart / List
	9
	0
	Info / Angle
	>> / Tune+
	Back / Return
	Exit / Cancel / Clear
	>>I / Preset+
	<< / Tune-
	Setup / OPT /
	AV / Input / RDS
	I<< / Preset-
	Red / Netflix / Search

Original	Rechange
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Shift + Sleep / Timer
	Shift + Blue / Prime / Prime
	Blue / Prime Video / Random
	D.Menu / Top



