




 
 
 
Original	Recharge
On	Power
Off	+ Shift + Power
Mute	Mute
AVR	+ Shift + 1
DVD	+ Shift + 2
CD	+ Shift + 3
Tape	+ Shift + 4
VID1/VCR	+ Shift + 5
VID2/TV	+ Shift + 6
VID3/CBL/SAT	+ Shift + 7
DIM	+ Shift + 8
AM/FM	+ Shift + 9
6 CH	+ Shift + Guide
Sleep	Sleep
Test	Smart
Input	AV
Vol+	Vol +

Original	Recharge
Surr.	Dual
Night	Exit
[≡]	Text
Vol-	Vol -
CH./[≡?]	TV/R
Up	Up
SPKR/Menu	Menu
Left	Left
Set	Ok
Right	Right
Digital/[≡X]	Media
Down	Down
Delay/Normal	Info
1	1
2	2
3	3
4	4





 

 

 



 



 


 
 

 

 







 
 


 

 







 
 



 


 

 

 


 
 









Original	Rechange
 5	 5
 6	 6
 7	 7
 8	 8
 Tun-M/[≡+]	 Guide
 9	 9
 0	 0
 Mem/[≡◆]	 Pre Ch
 Tuning ▲ / Red	 Ch +
 Tuning ▲ / Red	 Red
 Direct/Green	 Green
 Clear/Yellow	 Yellow
 Preset ▲ / Blue	 Shift + Ch +
 Preset ▲ / Blue	 Blue
 Tuning ▼	 Ch -
 RDS/D.Skip	 Options
 Preset ▼	 Shift + Ch -

Original	Rechange
 Dolby	 Shift + Red
 DTS Surr.	 Shift + Green
 DTS Neo 6	 Shift + Yellow
 Logic 7	 Shift + Pre Ch
 Stereo	 Shift + Blue
 Skip Dwn DVD	 I<<
 Skip Up DVD	 >>I
 << DVD	 <<
 Play DVD	 Play
 >> DVD	 >>
 Stop DVD	 Stop
 Pause DVD	 Pause




 










Original		Rechange		Original		Rechange	
	Power On		Power		3		3
	Power Off		Shift + Power		4		4
	Vol+		Vol +		5		5
	Night		Exit		6		6
	[=]		Text		7		7
	Vol-		Vol -		8		8
	CH./[=?]		TV/R		Tun-M/[=+]		Guide
	Up		Up		9		9
	SPKR/Menu		Menu		0		0
	Left		Left		Mem/[=◇]		Pre Ch
	Set		Ok		Direct		Smart
	Right		Right		Clear		Shift + Exit
	Digital/[=X]		Media		Preset ▲		Ch +
	Down		Down		RDS/D.Skip		Options
	Delay/Normal		Info		Preset ▼		Ch -
	1		1		I<<		I<<
	2		2		>>I		>>I






 
 

 

 
 


 

 



 
 
 





 
 
 

 






 

 


 

 
 
 
 
 





	Original	Rechange	Original	Rechange
	<<		<<	<<
	Play		Play	Play
	>>		>>	>>
	Stop		Stop	Stop
	Pause		Pause	Pause






 


 





Original	Rechange
 Power On	 Power
 Power Off	 Shift + Power
 SPKR/MENU	 Menu
 Delay/Normal	 Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 Tun-M/[≡+]	 Guide
 9	 9
 0	 0
 Mem/[≡◆]	 Pre Ch
 Direct	 Smart

Original	Rechange
 Preset ▲/Blue	 Ch +
 RDS/D.Skip	 Options
 I<<	 I<<
 >>I	 >>I
 <<	 <<
 Play	 Play
 >>	 >>
 Stop	 Stop
 Pause	 Pause





	Original	Rechange		Original	Rechange
	<<	 <<			
	<>	 Play			
	>>	 >>			
	Rec	 Rec			
	Stop	 Stop			

