



| Original | | Rechange | | Original | | Rechange | |
|----------|--------------|----------|----------------------------|----------|--------------|----------|---------------------------|
| | On | | Power | | Night | | Info / Angle |
| | Off | | Shift + Power | | M-Room | | Zoom / Size |
| | Mute | | Mute / Dimmer | | Vol- | | Vol- |
| | AVR | | Fav / Marker / PC | | CH./[≡?] | | Yellow / YouTube / Repeat |
| | DVD | | Shift + 2 | | Up | | Up |
| | CD | | Shift + 3 | | SPKR/Menu | | Menu / Home |
| | Tape | | Shift + 5 | | Left | | Left |
| | VID1/VCR | | Guide / EPG / -/-- | | Set | | D.Menu / Top |
| | VID2/TV | | Shift + 1 | | Right | | Right |
| | VID3/CBL/SAT | | Shift + 0 | | Digital/[≡X] | | Red / Netflix / Search |
| | VID4 | | Shift + Guide / EPG / -/-- | | Down | | Down |
| | AM/FM | | Shift + 6 | | Delay/Normal | | Setup / OPT / |
| | 6/8 CH | | Picture / Format | | 1 | | 1 |
| | Sleep | | Sleep / Timer | | 2 | | 2 |
| | Test | | Text / Goto | | 3 | | 3 |
| | Vol+ | | Vol+ | | 4 | | 4 |
| | Surr. | | Eject / Surround | | 5 | | 5 |





 






















 












 








 

 





 














| Original | Recharge |
|------------|-----------------------|
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| Tun-M/[≡+] | Green / APP / Repeat |
| 9 | 9 |
| 0 | 0 |
| Mem/[≡◆] | Rec / Rec Mode |
| Tuning ▲ | >> / Tune+ |
| Direct | TV/Radio / |
| Clear | Exit / Cancel / Clear |
| Preset ▲ | >>I / Preset+ |
| Tuning ▼ | << / Tune- |
| OSD | Display / Media |
| RDS | AV / Input / RDS |
| Preset ▼ | I<< / Preset- |
| Dolby | Sound / Title |
| DTS Surr. | Smart / List |

| Original | Recharge |
|---------------|-----------------------------|
| DTS Neo 6 | Subtitle / EQ |
| Logic 7 | Blue / Prime Video / Random |
| Stereo | Audio / Lang I/II |
| I<</Skip Down | Shift + I<< / Preset- |
| Skip Up/>>I | Shift + >>I / Preset+ |
| << DVD | Shift + << / |
| Play DVD | Play / Slow |
| >> DVD | Shift + >> / |
| Stop DVD | Stop / Hold |
| Pause DVD | Pause / Step / Freeze |





| Original | | Rechange | | Original | | Rechange | |
|---|--------------|---|---------------------------|---|------------|---|-----------------------|
|  | Power On |  | Power |  | 3 |  | 3 |
|  | Power Off |  | Shift + Power |  | 4 |  | 4 |
|  | Vol+ |  | Vol+ |  | 5 |  | 5 |
|  | Night |  | Info / Angle |  | 6 |  | 6 |
|  | M-Room |  | Zoom / Size |  | 7 |  | 7 |
|  | Vol- |  | Vol- |  | 8 |  | 8 |
|  | CH./[≡?] |  | Yellow / YouTube / Repeat |  | Tun-M/[≡+] |  | Green / APP / Repeat |
|  | Up |  | Up |  | 9 |  | 9 |
|  | SPKR/Menu |  | Menu / Home |  | 0 |  | 0 |
|  | Left |  | Left |  | Mem/[≡◇] |  | Rec / Rec Mode |
|  | Set |  | D.Menu / Top |  | Direct |  | TV/Radio / |
|  | Right |  | Right |  | Clear |  | Exit / Cancel / Clear |
|  | Digital/[≡X] |  | Red / Netflix / Search |  | Preset ▲ |  | Shift + >>I / Preset+ |
|  | Down |  | Down |  | RDS/D.Skip |  | AV / Input / RDS |
|  | Delay/Normal |  | Setup / OPT / |  | Preset ▼ |  | Shift + I<< / Preset- |
|  | 1 |  | 1 |  | I<< |  | I<< / Preset- |
|  | 2 |  | 2 |  | >>I |  | >>I / Preset+ |





| Original | Recharge | Original | Recharge |
|----------|----------|----------|-----------------------|
| | << | | << / Tune- |
| | Play | | Play / Slow |
| | >> | | >> / Tune+ |
| | Stop | | Stop / Hold |
| | Pause | | Pause / Step / Freeze |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |







| Original | | Recharge | | Original | | Recharge | |
|----------|----------------|----------|-----------------------|----------|---------------|----------|-----------------------------|
| | Power On | | Power | | Vol- VCR | | Vol- |
| | Play | | Play / Slow | | PR- VCR | | CH- / Page- |
| | Pause | | Pause / Step / Freeze | | 1 | | 1 |
| | Stop | | Stop / Hold | | 2 | | 2 |
| | Mem/[≡ ♦] | | Rec / Rec Mode | | 3 | | 3 |
| | << | | << / Tune- | | 4 | | 4 |
| | >> | | >> / Tune+ | | 5 | | 5 |
| | l<< | | l<< / Preset- | | 6 | | 6 |
| | >>l | | >>l / Preset+ | | 7 | | 7 |
| | Direct | | TV/Radio / | | 8 | | 8 |
| | Delay/Normal | | Setup / OPT / | | 9 | | 9 |
| | RDS/D.Skip | | AV / Input / RDS | | 0 | | 0 |
| | SPKR/Menu | | Menu / Home | | Tun-M/[≡ +] | | Green / APP / Repeat |
| | Power (On/Off) | | OK | | Preset ▲/Blue | | Blue / Prime Video / Random |
| | Clear VCR | | Exit / Cancel / Clear | | Power Off | + | Shift + Power |
| | Vol+ VCR | | Vol+ | | Play VCR | + | Shift + Play / |
| | PR+ VCR | | CH+ / Page+ | | Stop VCR | + | Shift + Stop / |

Hold





| Original | Recharge |
|---|--|
|  Rec VCR |  Shift + Rec / Rec Mode |
|  << VCR |  Shift + << / |
|  >> VCR |  Shift + >> / |
|  1 VCR |  Shift + 1 |
|  2 VCR |  Shift + 2 |
|  3 VCR |  Shift + 3 |
|  4 VCR |  Shift + 4 |
|  5 VCR |  Shift + 5 |
|  6 VCR |  Shift + 6 |
|  7 VCR |  Shift + 7 |
|  8 VCR |  Shift + 8 |
|  9 VCR |  Shift + 9 |
|  0 VCR |  Shift + 0 |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

| Original | Recharge |
|----------|----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |





| Original | | Rechange | | Original | | Rechange | |
|---|------|---|----------------|----------|--|----------|--|
|  | <> |  | Play / Slow | | | | |
|  | >> |  | >> / Tune+ | | | | |
|  | << |  | << / Tune- | | | | |
|  | Stop |  | Stop / Hold | | | | |
|  | Rec |  | Rec / Rec Mode | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

