























 



 





 





 













Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 TV/SAT	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 SAT	 Shift + 0
 π	 TV/Radio /
 Menu	 Menu / Home
 EPG	 Guide / EPG / -/--

Original	Rechange
 i	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Vol-	 Vol-
 CH-	 CH- / Page-
 CH+	 CH+ / Page+
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 OK	 OK
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 FAV	 Fav / Marker / PC
 RCL	 Back / Return





Original	Recharge	Original	Recharge
 FUNC	 SETUP Setup / OPT /		
 Timer	 SLEEP Sleep / Timer		
 Audio	 AUDIO Audio / Lang I/II		
 Lang	 SHIFT + AUDIO Shift + Audio / Lang I/II		
 Text	 TEXT Text / Goto		
 A-Z	 ZOOM Zoom / Size		

Original	Recharge

