 


 













 
 
 


 



 
 
 





Original	Recharge	Original	Recharge
	Power		Power
	[T]		Options
	Folder		AV
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Tv Rec		3D
	[I≡]		Text
	Tv Play		TV/R
	[o]		Dual
	[   ]		Menu
	Back		Back
	i		Info
	[...]		Subt
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Windows		Media
	PR+		Ch +
	PR-		Ch -
	Rec		Rec
	Open/Close		Eject
	<<		<<
	Play		Play
	Pause		Pause
	>>		>>
	I<		I<<
	Stop		Stop





Original		Rechange		Original		Rechange	
	>		>>				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	*		GUIDE				
	#		PRE-CH				
	Clear		EXIT				
	Enter		SMART				

