



Original	Rechange
Standby/On	Power
Open/Close	Eject / Surround
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Angle	Info / Angle
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Clear	Exit / Cancel / Clear
Top Menu	D.Menu / Top

Original	Rechange
Menu	Shift + Menu /
Home Menu	Menu / Home
Return	Back / Return
Up	Up
Down	Down
Right	Right
Left	Left
Enter	OK
<</<II/<I	<< / Tune-
Play	Play / Slow
>>/II>/I>	>> / Tune+
I<<	I<< / Preset-
Pause	Pause / Step / Freeze
Stop	Stop / Hold
>>I	>>I / Preset+
Play Mode	Guide / EPG / -/-
Surround	Shift + Eject / Surround





	Original	Rechange	Original	Rechange
	Zoom	 Zoom / Size		
	Display	 Display / Media		

