



Original	Rechange
Power	Power
Open / Close	Eject
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Display	Info
+10	Guide
Vol-	Vol -
Vol+	Vol +
Mute	Mute

Original	Rechange
DVD Menu	D. Menu
Setup	Menu
I<<	I<<
>>I	>>I
Up	Up
Left	Left
Enter	Ok
Right	Right
Down	Down
<<	<<
>>	>>
Play	Play
Pause / Step	Pause
Slow	Rec
Stop	Stop
Program	Sleep
Subtitle	Subt





Original	Rechange
CANCEL Cancel	CLEAR EXIT Exit
SEARCH Search	SEARCH TV/R TV/R
PAL-MUL-NT PAL-MUL-NT	PICTURE FORMAT Format
ANGLE Angle	HOME SMART Smart
REPEAT Repeat	REPEAT TEXT Text
AUDIO Audio	SOUND DUAL Dual
ZOOM Zoom	SHIFT + ZOOM Eject
A-B A-B	SHIFT + REPEAT Text

Original	Rechange

