



 



 



 
 


 



 



 







 

 

 

 

 

 

 



 



 

 

 

 




 




 

 

 

 


 



 


 
 
 

 

 

 

 

 

 

 





Original		Rechange		Original		Rechange	
	Power		Power		Vol-		Vol-
	Source		AV / Input / RDS		Vol+		Vol+
	P.Mode		Setup / OPT /		Mute		Mute / Dimmer
	S.Mode		Sound / Title		P+		CH+ / Page+
	Home		Shift + Menu /		I/II/Audio		Audio / Lang I/II
	1		1		P-		CH- / Page-
	2		2		Subtitle		Subtitle / EQ
	3		3		3D World		Display / Media
	4		4		Info		Info / Angle
	5		5		FAV		Fav / Marker / PC
	6		6		Screen		Picture / Format
	7		7		CH List		Smart / List
	8		8		Menu		Menu / Home
	9		9		Up		Up
	Q.View		D.Menu / Top		Guide		Guide / EPG / -/-
	0		0		Left		Left
	Sleep		Sleep / Timer		OK		OK





Original	Rechange	Original	Rechange
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	<<		<< / Tune-
	Green		Green / APP / Repeat
	>>		>> / Tune+
	Yellow		Yellow / YouTube / Repeat
	l<<		l<< / Preset-
	Blue		Blue / Prime Video / Random
	>>l		>>l / Preset+
	Text		Text / Goto
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode

