

 

 

 


 
 

 
 
 

 

 

 

 

 


 
 


 


 




Original	Rechange
 Power	 Power
 Source	 AV
 P.Mode	 Format
 S.Mode	 Shift + Dual
 Home	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Q.View	 Options
 Sleep	 Sleep

Original	Rechange
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 I/II/Audio	 Dual
 P+	 Ch +
 P-	 Ch -
 Subtitle	 Subt
 3D World	 3D
 Info	 Info
 FAV	 Pre Ch
 Screen	 Media
 CH List	 List
 Menu	 Menu
 Guide	 Guide
 Back	 Back
 Exit	 Exit
 Up	 Up





Original	Rechange	Original	Rechange
 Down	 Down		
 Right	 Right		
 Left	 Left		
 OK	 Ok		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 <<<	 <<<		
 >>>	 >>>		
 I<<<	 I<<<		
 >>>I	 >>>I		
 Text	 Text		
 Play	 Play		
 Pause	 Pause		
 Stop	 Stop		
 Rec	 Rec		

