 

 





 



 










 


















 





 























Original		Rechange		Original		Rechange	
	Power		Power		Input		AV / Input / RDS
	1		1		P-		CH- / Page-
	2		2		Home		Menu / Home
	3		3		Guide		Guide / EPG / -/-
	4		4		Info		Info / Angle
	5		5		Up		Up
	6		6		Left		Left
	7		7		OK		OK
	8		8		Right		Right
	9		9		Back		Back / Return
	Lang		Audio / Lang I/II		Down		Down
	0		0		Exit		Exit / Cancel / Clear
	TXT		Text / Goto		Netflix		Shift + Red / Netflix /
	V+		Vol+		YouTube		Shift + Yellow / YouTube /
	Mute		Mute / Dimmer		Prime Video		Shift + Blue / Prime
	P+		CH+ / Page+		Twitch		Shift + Green / APP /
	V-		Vol-		Fav1		Smart / List



