










 

 



 







| Original   | Recharge  | Original   | Recharge   |
|--|---|--|--|
|  Power        |  Power                           |  Info       |  Info / Angle           |
|  Mute         |  Mute / Dimmer                   |  [ I ]/Menu |  Menu / Home            |
|  Red          |  Red / Netflix / Search          |  Up         |  Up                     |
|  Green        |  Green / APP / Repeat            |  Source     |  AV / Input / RDS       |
|  Yellow       |  Yellow / YouTube / Repeat       |  Left       |  Left                   |
|  Blue         |  Blue / Prime Video / Random     |  OK         |  OK                     |
|  << / [≡o]    |  << / Tune-                      |  Right      |  Right                  |
|  >> / [≡?]    |  >> / Tune+                      |  Down       |  Down                   |
|  I<< / [≡+]   |  I<< / Preset-                   |  EPG        |  Guide / EPG / -/-      |
|  >>I / [≡..] |  >>I / Preset+                  |  Exit      |  Exit / Cancel / Clear |
|  Play       |  Play / Slow                   |  Vol+     |  Vol+                 |
|  Pause      |  Pause / Step / Freeze         |  FAV      |  Fav / Marker / PC    |
|  Stop       |  Stop / Hold                   |  CH+      |  CH+ / Page+          |
|  [≡i]       |  Smart / List                  |  Vol-     |  Vol-                 |
|  Text       |  Text / Goto                   |  REP/Rec  |  Rec / Rec Mode       |
|  Subtitle   |  Subtitle / EQ                 |  CH-      |  CH- / Page-          |
|  Freeze     |  Shift + Pause / Step / Freeze |  1        |  1                    |























| Original  |        | Rechange  |                   |
|---|--------|---|-------------------|
|    | 2      |    | 2                 |
|    | 3      |    | 3                 |
|    | 4      |    | 4                 |
|    | 5      |    | 5                 |
|    | 6      |    | 6                 |
|    | 7      |    | 7                 |
|    | 8      |    | 8                 |
|    | 9      |    | 9                 |
|    | Audio  |    | Audio / Lang I/II |
|   | 0      |   | 0                 |
|  | Recall |  | Back / Return     |
|   |        |   |                   |
|   |        |   |                   |
|   |        |   |                   |
|   |        |   |                   |
|   |        |   |                   |
|   |        |   |                   |
|   |        |   |                   |
|   |        |   |                   |

| Original |  | Rechange |  |
|----------|--|----------|--|
|          |  |          |  |
|          |  |          |  |
|          |  |          |  |
|          |  |          |  |
|          |  |          |  |
|          |  |          |  |
|          |  |          |  |
|          |  |          |  |
|          |  |          |  |
|          |  |          |  |
|          |  |          |  |
|          |  |          |  |
|          |  |          |  |
|          |  |          |  |
|          |  |          |  |
|          |  |          |  |
|          |  |          |  |
|          |  |          |  |
|          |  |          |  |





| Original  | Recharge  | Original | Recharge  |
|-----------|---|----------|---|
| Power     |  Power                 | TXT/MIX  |  Text / Goto           |
| Mute      |  Mute / Dimmer         | Menu     |  Menu / Home           |
| Play      |  Play / Slow           | Up       |  Up                    |
| Pause     |  Pause / Step / Freeze | Info     |  Info / Angle          |
| Stop      |  Stop / Hold           | Left     |  Left                  |
| Rec       |  Rec / Rec Mode        | Enter    |  OK                    |
| <</Hold   |  << / Tune-            | Right    |  Right                 |
| >>/Index  |  >> / Tune+            | Cancel   |  Exit / Cancel / Clear |
| I<<       |  I<< / Preset-         | Down     |  Down                  |
| >>I       |  >>I / Preset+        | Back     |  Back / Return        |
| Nicam/A2  |  Audio / Lang I/II   | Vol+     |  Vol+                |
| Subtitle  |  Subtitle / EQ       | List     |  Smart / List        |
| Subpage   |  Eject / Surround    | CH+      |  CH+ / Page+         |
| Size      |  Zoom / Size         | Vol-     |  Vol-                |
| Sleep     |  Sleep / Timer       | Mode     |  Display / Media     |
| DTV/Radio |  TV/Radio /          | CH-      |  CH- / Page-         |
| Reveal    |  D.Menu / Top        | 1        |  1                   |



| Original  | Recharge  | Original | Recharge  |
|-----------|---|----------|---|
| Power     |  Power                 | TXT/MIX  |  Text / Goto           |
| Mute      |  Mute / Dimmer         | Menu     |  Menu / Home           |
| Play      |  Play / Slow           | Up       |  Up                    |
| Pause     |  Pause / Step / Freeze | Info     |  Info / Angle          |
| Stop      |  Stop / Hold           | Left     |  Left                  |
| Rec       |  Rec / Rec Mode        | Enter    |  OK                    |
| <</Hold   |  << / Tune-            | Right    |  Right                 |
| >>/Index  |  >> / Tune+            | Cancel   |  Exit / Cancel / Clear |
| I<<       |  I<< / Preset-         | Down     |  Down                  |
| >>I       |  >>I / Preset+         | Back     |  Back / Return        |
| Nicam/A2  |  Audio / Lang I/II   | Vol+     |  Vol+                |
| Subtitle  |  Subtitle / EQ       | List     |  Smart / List        |
| Subpage   |  Eject / Surround    | CH+      |  CH+ / Page+         |
| Size      |  Zoom / Size         | Vol-     |  Vol-                |
| Sleep     |  Sleep / Timer       | Mode     |  Display / Media     |
| DTV/Radio |  TV/Radio /          | CH-      |  CH- / Page-         |
| Reveal    |  D.Menu / Top        | 1        |  1                   |


















































 


| Original   | Rechange  | Original | Rechange  |
|------------|---|----------|---|
| Power      |  Power                 | Up       |  Up                    |
| Mute       |  Mute / Dimmer         | Info     |  Info / Angle          |
| Play       |  Play / Slow           | Left     |  Left                  |
| Pause      |  Pause / Step / Freeze | Ok       |  OK                    |
| Stop       |  Stop / Hold           | Right    |  Right                 |
| Rec        |  Rec / Rec Mode        | Exit     |  Exit / Cancel / Clear |
| <</[Timer] |  << / Tune-            | Down     |  Down                  |
| >>/[≡?]    |  >> / Tune+            | Recall   |  Back / Return         |
| I<</[≡⇅]   |  I<< / Preset-         | Vol+     |  Vol+                  |
| >>I/[≡...] |  >>I / Preset+         | [≡i]     |  Smart / List          |
| Audio      |  Audio / Lang I/II    | Ch+      |  CH+ / Page+          |
| Subtitle   |  Subtitle / EQ       | Vol-     |  Vol-                |
| I<</[≡⇅]   |  Zoom / Size         | Ch-      |  CH- / Page-         |
| <</[Timer] |  Sleep / Timer       | 1        |  1                   |
| Text       |  Text / Goto         | 2        |  2                   |
| Source/Av  |  AV / Input / RDS    | 3        |  3                   |
| [II]       |  Menu / Home         | 4        |  4                   |

| Original   | Rechange  | Original | Rechange  |
|------------|---|----------|---|
| Power      |  Power                 | Up       |  Up                    |
| Mute       |  Mute / Dimmer         | Info     |  Info / Angle          |
| Play       |  Play / Slow           | Left     |  Left                  |
| Pause      |  Pause / Step / Freeze | Ok       |  OK                    |
| Stop       |  Stop / Hold           | Right    |  Right                 |
| Rec        |  Rec / Rec Mode        | Exit     |  Exit / Cancel / Clear |
| <</[Timer] |  << / Tune-            | Down     |  Down                  |
| >>/[≡?]    |  >> / Tune+            | Recall   |  Back / Return         |
| I<</[≡⇅]   |  I<< / Preset-         | Vol+     |  Vol+                  |
| >>I/[≡...] |  >>I / Preset+         | [≡i]     |  Smart / List          |
| Audio      |  Audio / Lang I/II    | Ch+      |  CH+ / Page+          |
| Subtitle   |  Subtitle / EQ       | Vol-     |  Vol-                |
| I<</[≡⇅]   |  Zoom / Size         | Ch-      |  CH- / Page-         |
| <</[Timer] |  Sleep / Timer       | 1        |  1                   |
| Text       |  Text / Goto         | 2        |  2                   |
| Source/Av  |  AV / Input / RDS    | 3        |  3                   |
| [II]       |  Menu / Home         | 4        |  4                   |





| Original | Recharge  | Original | Recharge |
|----------|---|----------|----------|
| 5        |  5                             |          |          |
| 6        |  6                             |          |          |
| 7        |  7                             |          |          |
| 8        |  8                             |          |          |
| 9        |  9                             |          |          |
| Epg      |  Guide / EPG / -/--            |          |          |
| 0        |  0                             |          |          |
| Fav      |  Fav / Marker / PC             |          |          |
| Red      |  Red / Netflix / Search        |          |          |
| Green    |  Green / APP / Repeat          |          |          |
| Yellow   |  Yellow / YouTube / Repeat    |          |          |
| Blue     |  Blue / Prime Video / Random |          |          |
| Freeze   |  Shift + Pause / Step /      |          |          |
|          |   |          |          |
|          |   |          |          |
|          |   |          |          |
|          |   |          |          |
|          |   |          |          |
|          |   |          |          |
|          |   |          |          |
|          |   |          |          |
|          |   |          |          |

