





 

 



 

 

 

 
 

 


 

 
 



 






Original	Recharge
 Power	 Power
 Input	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Guide	 Guide
 CH.List	 List
 Red	 Red
 Green	 Green
 Yellow	 Yellow

Original	Recharge
 Blue	 Blue
 [=]	 Menu
 Play	 Play
 Pause	 Pause
 Back	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Home	 Smart
 Micro	 Media
 CH+	 Ch +





Original		Rechange		Original	Rechange
CH	CH-	CH	Ch -		
SUBTITLE	Subtitle	AD SUBT	Subt		
TEXT	Text	REPEAT TEXT	Text		
FREE	Free	SETTINGS OPT	Options		
SPORTS	Sports	SEARCH TV/R	TV/R		
Music	Music	SOUND DUAL	Dual		
NETFLIX	Netflix	PICTURE FORMAT	Format		
prime video	prime video	ECO 3D	3D		
YouTube	YouTube	E-MANUAL D.MENU	D. Menu		
Rakuten TV	Rakuten Tv	ZOOM	Eject		
7	7	PROG SLEEP	Sleep		
CHILI	Chili	DISPLAY INFO	Info		

