





 



 





 



 


 

 
 










Original	Rechange
 Power	 Power
 Input	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Guide	 Guide / EPG / -/--
 Subtitle	 Subtitle / EQ
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Rechange
 Blue	 Blue / Prime Video / Random
 [=]	 D.Menu / Top
 TXT	 Text / Goto
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 Home	 Menu / Home
 CH.List	 Smart / List
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 CH-	 CH- / Page-



