 

 

 

 

 







 















 


















 



 

 





 

 

 

 

Original	Recharge
 Power	 Power
 TV / DTV	 TV/Radio /
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Recall	 Back / Return
 0	 0
 Info	 Info / Angle
 Fav	 Fav / Marker / PC
 Picture	 Picture / Format

Original	Recharge
 Sound	 Sound / Title
 Vol+	 Vol+
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 CH-	 CH- / Page-
 Menu	 Menu / Home
 EPG	 Guide / EPG / -/-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 I/II	 Audio / Lang I/II
 Still	 Pause / Step / Freeze
 Zoom	 Zoom / Size
 Exit	 Exit / Cancel / Clear





Original	Recharge
 Radio / Browse	 Display / Media
 T.Shift / Rotate	 Setup / OPT /
 Lang / Page Up	 Shift + CH+ /
 Lang / Page Up	 Shift + Audio / Lang I/II
 Subtitle / Page Down	 Shift + CH- /
 Subtitle / Page Down	 Subtitle / EQ
 DMP.	 Smart / List
 PVR	 D.Menu / Top
 Play / Pause	 Play / Slow
 Stop	 Stop / Hold
 Red / <<	 << / Tune-
 Red / <<	 Red / Netflix / Search
 Green / >>	 >> / Tune+
 Green / >>	 Green / APP / Repeat
 Yellow / I<<	 I<< / Preset-
 Yellow / I<<	 Yellow / YouTube / Repeat
 Blue / >>I	 Blue / Prime Video / Random

Original	Recharge
 Blue / >>I	 >>I / Preset+
 Text	 Text / Goto
 Size	 Shift + Zoom /
 Reveal	 Eject / Surround
 Cancel	 Shift + Exit / Cancel / Clear
 Hold / Sleep	 Shift + Stop /
 Hold / Sleep	 Sleep / Timer
 Index	 Shift + Info / Angle
 Sub. Code	 Shift + Subtitle / EQ
 Mix	 Shift + Text /

