





 










 





 





 



 




Original	Recharge
 Power	 Power
 Input	 AV / Input / RDS
 Disney+	 Shift + 1
 YouTube	 Shift + Yellow / YouTube /
 prime video	 Shift + Blue / Prime
 ::	 Shift + 4
 Mediaset infinity	 Shift + 5
 DAZN	 Shift + 6
 Rakuten Tv	 Shift + 7
 pluto tv	 Shift + 8
 FIFA+	 Shift + 9
 Netflix	 Shift + Red / Netflix /
 VIDAA tv	 Shift + 0
 Rai Play	 Fav / Marker / PC
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Recharge
 Blue	 Blue / Prime Video / Random
 [=]	 D.Menu / Top
 Up	 Up
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Home	 Menu / Home
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Micro	 Display / Media
 CH-	 CH- / Page-





Original	Rechange	Original	Rechange
 Subtitle	 Subtitle / EQ		
 Mute	 Mute / Dimmer		
 Text	 Text / Goto		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 Guide	 Guide / EPG / -/--		
 0	 0		
 CH.List	 Smart / List		

