



Original		Recharge		Original		Recharge	
	POWER		Power		REPEAT/GREEN/▼		Green / APP / Repeat
	INFO		Info / Angle		7		7
	HDMI CONTROL		Smart / List		8		8
	SLEEP		Sleep / Timer		9		9
	SCREEN		Picture / Format		ROOT/YELLOW		Yellow / YouTube / Repeat
	SOURCE		AV / Input / RDS		RETURN		Back / Return
	PRESETS		Setup / OPT /		0		0
	1		1		MENU		Menu / Home
	2		2		TITLE/BUE		Sound / Title
	3		3		TITLE/BUE		Blue / Prime Video / Random
	ZOOM/RED/▲		Zoom / Size		UP		Up
	ZOOM/RED/▲		Shift + CH+ /		LEFT		Left
	ZOOM/RED/▲		Red / Netflix / Search		OK/SELECT		OK
	4		4		RIGHT		Right
	5		5		DOWN		Down
	6		6		P+		CH+ / Page+
	REPEAT/GREEN/▼		Shift + CH- /		P-		CH- / Page-

Page-





Original		Recharge	
	V-		Vol-
	V+		Vol+
	FAV		Fav / Marker / PC
	LANG		Audio / Lang I/II
	SUBTITLE		Subtitle / EQ
	MUTE		Mute / Dimmer
	SWAP/↔	+	Shift + Back / Return
	EPG		Guide / EPG / -/-
	[*] / [··]		D.Menu / Top
	TEXT		Text / Goto
	C		Exit / Cancel / Clear
	DISPLAY		Display / Media
	ANGLE	+	Shift + Info / Angle
	SEARCH MODE	+	Shift + Red / Netflix /
	REC		Rec / Rec Mode
	STOP		Stop / Hold
	PLAY		Play / Slow

Original		Recharge	
	PAUSE		Pause / Step / Freeze
<< button"/>	<<		<< / Tune-
>> button"/>	>>		>> / Tune+
	I<<		I<< / Preset-
>>I button"/>	>>I		>>I / Preset+

