



| Original | Recharge |
|--------------|-----------------------------|
| Standby | Power |
| Open / Close | Eject / Surround |
| Prog | TV/Radio / |
| Shuffle | Blue / Prime Video / Random |
| Repeat | Green / APP / Repeat |
| A-B | Yellow / YouTube / Repeat |
| Title | Shift + Sound / Title |
| Display | Display / Media |
| Zoom | Zoom / Size |
| Menu | Menu / Home |
| Setup | Setup / OPT / |
| Return | Back / Return |
| Up | Up |
| Left / AM | Left |
| Select | OK |
| Right / FM | Right |
| Down | Down |

| Original | Recharge |
|------------------|----------------------------|
| Play/Pause | Play / Slow |
| Stop | Stop / Hold |
| I<< Skip / Tune- | I<< / Preset- |
| I<< Skip / Tune- | Shift + I<< / Preset- |
| Skip >>I / Tune+ | >>I / Preset+ |
| Skip >>I / Tune+ | Shift + Skip >>I / Preset+ |
| << Search | << / Tune- |
| Search >> | >> / Tune+ |
| Volume+ | Vol+ |
| Speaker | D.Menu / Top |
| Test Tone | Text / Goto |
| Volume- | Vol- |
| Mute | Mute / Dimmer |
| Sound Effects | Sound / Title |
| Subtitle | Subtitle / EQ |
| Mode | Smart / List |
| Audio | Audio / Lang I/II |



