 
 




 

 












 

 

 

 






Original	Rechange
 Tv/Rad	 TV/Radio /
 Input/Text	 Text / Goto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Mute	 Mute / Dimmer
 Back	 Back / Return
 Red	 Red / Netflix / Search
 Opt.	 Setup / OPT /
 Green	 Green / APP / Repeat

Original	Rechange
 A/V+	 AV / Input / RDS
 Yellow	 Yellow / YouTube / Repeat
 FAV	 Fav / Marker / PC
 Blue/A-Z	 Blue / Prime Video / Random
 EPG	 Guide / EPG / -/-
 Info	 Info / Angle
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 P-	 CH- / Page-
 P+	 CH+ / Page+
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 <<	 << / Tune-
 Stop	 Stop / Hold
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 List	 Smart / List





Original	Rechange
	I>/Slow
	A-B
	Mark
	PIP
	Jump
	Movie
	Up
	Swap
	Down
	Right
	Left
	1 TV
	2 TV
	3 TV
	4 TV
	5 TV
	6 TV

Original	Rechange
	7 TV
	8 TV
	9 TV
	0 TV
	Mute TV
	Input/Text TV
	P+ TV
	P- TV
	Vol-
	Vol- TV
	Sleep
	Power Tv
	Vol+ TV
	Power
	OK
	Vol+

