





 

 

 

 

 

 





 















Original	Rechange
 Power	 Power
 Rec	 Rec / Rec Mode
 Red	 Red / Netflix / Search
 I<<	 I<< / Preset-
 Green/[ ]	 Green / APP / Repeat
 Stop	 Stop / Hold
 Yellow	 Yellow / YouTube / Repeat
 Play/[:]	 Play / Slow
 Blue/[■]	 Blue / Prime Video / Random
 >>I	 >>I / Preset+
 AV/[?]	 AV / Input / RDS
 I-II/[≡≡]	 Audio / Lang I/II
 [<>]/[+]	 Picture / Format
 [-S-]	 Zoom / Size
 Menu	 Menu / Home
 [≡]	 Text / Goto
 Pause	 Pause / Step / Freeze

Original	Rechange
 Left	 Left
 Up	 Up
 Right	 Right
 OK	 OK
 Down	 Down
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 Vol-	 Vol-
 Smart J	 Sound / Title
 P-	 CH- / Page-
 Smart [ ]	 Smart / List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5

 
 
 
 




Original		Rechange		Original		Rechange	
[6]	6	TUNER 6	6				
[7]	7	AUX - HDD 7	7				
[8]	8	USB 8	8				
[9]	9	BLUETOOTH 9	9				
[i+]	[i+]	ANGLE INFO	Info / Angle				
[0]	0	HDMI - BAT 0	0				
[P/P]	P<P	PC FAV MARKER	Fav / Marker / PC				





Original	Recharge
 0	 Eject / Surround
 -0-	 Subtitle / EQ
 Power	 Power
 Rec	 Rec / Rec Mode
 I<<	 I<< / Preset-
 Red	 Red / Netflix / Search
 Green/[ ]	 Green / APP / Repeat
 Stop	 Stop / Hold
 Play	 Play / Slow
 Yellow / List	 Yellow / YouTube / Repeat
 >>I	 >>I / Preset+
 AV/[?]	 AV / Input / RDS
 I-II/[≡≡]	 Audio / Lang I/II
 [<>]/[+]	 Zoom / Size
 PIP [■]	 Picture / Format
 Menu	 Menu / Home
 Pause	 Pause / Step / Freeze

Original	Recharge
 [≡]	 Text / Goto
 Left	 Left
 Up	 Up
 Right	 Right
 OK	 OK
 Down	 Down
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 Vol-	 Vol-
 Smart J	 Sound / Title
 P-	 CH- / Page-
 Smart [ ]	 Smart / List
 1	 1
 2	 2
 3	 3
 4	 4











 

 

 





 

 

 




Original		Rechange	
	5		5
	6		6
	7		7
	8		8
	9		9
	[i+]		Info / Angle
	0		0
	P<P		Fav / Marker / PC

Original		Rechange	





Original	Rechange
 Power	 Power
 -O-	 Subtitle / EQ
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 AV/[?]	 AV / Input / RDS
 I-II/[≡ ≡]	 Audio / Lang I/II
 [<>]/[+]	 Zoom / Size
 Pause	 Pause / Step / Freeze
 [≡]	 Text / Goto
 Left	 Left
 Up	 Up
 Right	 Right
 OK	 OK
 Down	 Down
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+

Original	Rechange
 Vol-	 Vol-
 Smart J	 Sound / Title
 P-	 CH- / Page-
 Smart [ ]	 Smart / List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 P<P	 Fav / Marker / PC

