


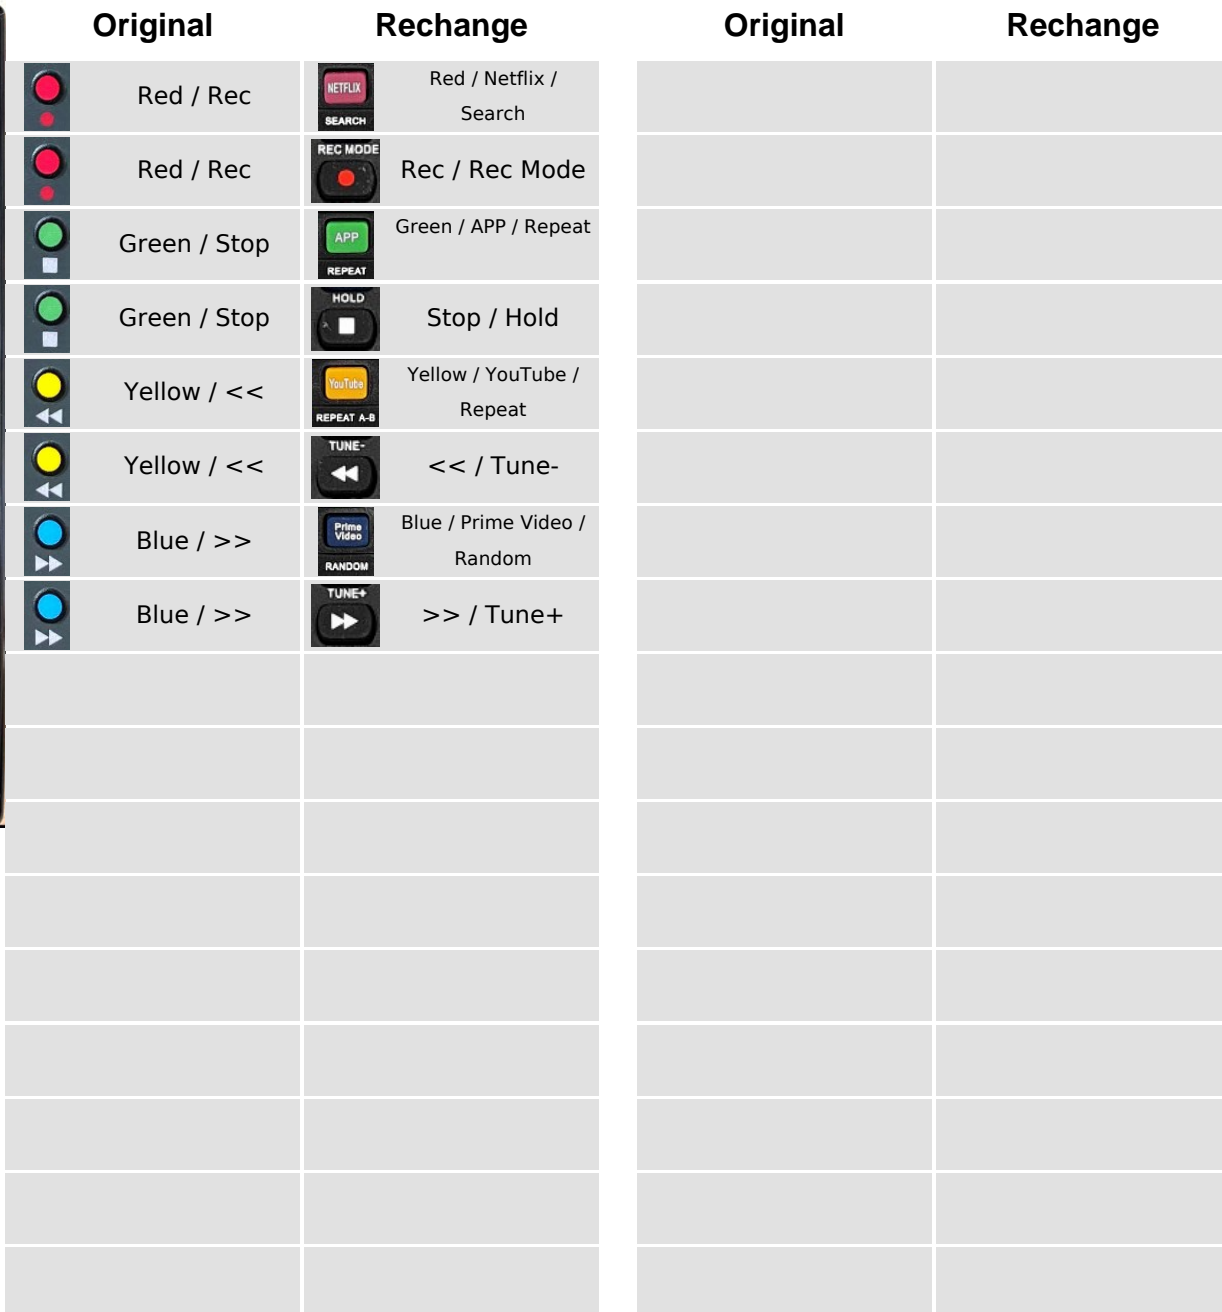







 


 

 

 


 

 


 




 
















Original	Recharge
 Power	 Power
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Vol+	 Vol+
 P-	 CH- / Page-
 P+	 CH+ / Page+
 Power 2	 Shift + Power
 [+]	 Display / Media
 PP	 Back / Return
 []	 Info / Angle
 []↔	 Picture / Format
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Original	Recharge
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide / EPG / -/--
 Contrast-	 I<< / Preset-
 Contrast+	 >>I / Preset+
 Brightness-	 Down
 Brightness+	 Up
 Text	 Text / Goto
 Text Subcode	 Subtitle / EQ
 Text Hold	 Shift + Stop /
 Text Size	 Zoom / Size
 Text Reveal	 Smart / List
 Text Index / Play	 Play / Slow
 Text Mix	 Shift + Text /
 Text Cancel	 Exit / Cancel / Clear







Original	Recharge	Original	Recharge
 Power	 Power	 7	 7
 Mute	 Mute / Dimmer	 8	 8
 Vol-	 Vol-	 9	 9
 Vol+	 Vol+	 0	 0
 P-	 CH- / Page-	 Text	 Guide / EPG / -/-
 P+	 CH+ / Page+	 Text Subcode	 Text / Goto
 Power 2	 Shift + Power	 Text Hold	 Shift + Stop /
 [+]	 Display / Media	 Text Size	 Zoom / Size
 PP	 Back / Return	 Text Reveal	 Smart / List
 []	 Info / Angle	 Play	 Play / Slow
 []↔	 Picture / Format	 Text Mix	 Shift + Text /
 1	 1	 Text Cancel	 Exit / Cancel / Clear
 2	 2	 Rec	 Rec / Rec Mode
 3	 3	 Stop	 Stop / Hold
 4	 4	 <<	 << / Tune-
 5	 5	 >>	 >> / Tune+
 6	 6		

