

 



 

 

 

 

 







 

 



 

 

 









 





 







 



 











Original		Rechange		Original		Rechange	
	Power		Power		7		7
	Mute		Mute / Dimmer		8		8
	Audio		Audio / Lang I/II		9		9
	TV / STB		AV / Input / RDS		0		0
	TV / R		TV/Radio /		SAT		Shift + 0
	Sleep		Sleep / Timer		EPG		Guide / EPG / -/-
	SUB		Subtitle / EQ		Fav		Fav / Marker / PC
	TXT		Text / Goto		PGUP		CH+ / Page+
	Multi		Display / Media		PGDN		CH- / Page-
	P / N		Picture / Format		Up		Up
	Recall		Back / Return		Right		Right
	1		1		FAV +		Vol+
	2		2		FAV -		Vol-
	3		3		Down		Down
	4		4		Left		Left
	5		5		OK		OK
	6		6		Menu		Menu / Home





Original	Recharge
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Pause	 Pause / Step / Freeze
 Zoom	 Zoom / Size
 Edit	 D.Menu / Top
 Info	 Info / Angle
 USB	 Shift + 8
 A - B	 Shift + Yellow / YouTube /
 Goto	 Shift + Text /
 OGG	 Shift + 1
 JPEG	 Shift + 2
 PIP	 Eject / Surround
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode

Original	Recharge
 T.S.	 Sound / Title
 <<	 << / Tune-
 >>	 >> / Tune+
 PVR List	 Smart / List
 Play / Pause	 Play / Slow
 I<<	 I<< / Preset-
 >I<	 Setup / OPT /
 >>I	 >>I / Preset+

