 
 
 

 

 
 

 


 
 


 





Original		Rechange		Original		Rechange	
	Standby		Power		>>I / Subpage		>>I
	Source		AV		Menu		Menu
	Red		Red		Exit		Exit
	Green		Green		Up		Up
	Yellow		Yellow		Down		Down
	Blue		Blue		Right		Right
	P Mode		Format		Left		Left
	S Mode		Dual		Enter		Ok
	Freeze		Smart		Play/Pause / Timeshift		Play
	TXT		Text		Play/Pause / Timeshift		Pause
	Mix / Fav List		Pre Ch		Stop / EPG		Stop
	Size / Subtitle		Subt		Stop / EPG		Guide
	Cancel / Audio		Shift + Dual		Vol +		Vol +
	Record		Rec		Vol -		Vol -
	<< / Index		<<		Mute		Mute
	>> / Hold		>>		TV / Radio		TV/R
	I<< / Reveal		I<<		CH +		Ch +





Original		Rechange	
CH v	CH -	CH -	Ch -
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
DISPLAY v	Display	DISPLAY INFO	Info
RECALL v	Recall	RETURN BACK	Back

Original		Rechange	

