

 




Original	Rechange	Original	Rechange
	Power		Power
			Picture / Format
	Back		Back / Return
	Menu		Menu / Home
	Up		Up
	Left		Left
	Ok		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Stop		Stop / Hold
	Smart Tv		Smart / List
	Skip Prev.		I<< / Preset-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Skip Next		>>I / Preset+
	Ch+		CH+ / Page+
	Vol-		Vol-
	Vol+		Vol+
	Ch-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue/00/Lang.		Blue / Prime Video / Random
	Mute		Mute / Dimmer
	Rec		Rec / Rec Mode
	Source		AV / Input / RDS
	Option		Setup / OPT /
	Subt.		Subtitle / EQ
	IPTV		Display / Media
	Eco / Search		Fav / Marker / PC
	Guide-Popup		Guide / EPG / -/-
	Ch.List		Shift + Smart / List
	Info		Info / Angle








Original		Recharge		Original		Recharge	
1	1	TV 1	1				
2 ARC	2	DVD 2	2				
3 DEF	3	CD - STB 3	3				
4 DISC	4	VIDEO 4	4				
5 INCL	5	TAPE 5	5				
6 MENU	6	TUNER 6	6				
7 POPS	7	AUX - HDD 7	7				
8 TV	8	USB 8	8				
9 MXYZ	9	BLUETOOTH 9	9				
DISC MENU	Disc Menu	TOP MENU D.MENU	D.Menu / Top				
0	0	HDMI - BAT 0	0				
TEXT MEDIA CENTER	Text / Media	GOTO TEXT	Text / Goto				
SOUND	Sound	TITLE SOUND	Sound / Title				
	◻ ↑ ↓ ↔ ◻	SIZE ZOOM	Zoom / Size				
REPEAT	Repeat	SHIFT + APP REPEAT	Shift + Green / APP /				





Original	Rechange	Original	Rechange
	Power		Power
	(•J)		TV/Radio /
	Back		Back / Return
	Menu		Menu / Home
	Up		Up
	Left		Left
	Ok		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Stop		Stop / Hold
	Smart Tv		Smart / List
	Skip Prev.		I<< / Preset-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Skip Next		>>I / Preset+
	Ch+		CH+ / Page+
	Vol-		Vol-
	Vol+		Vol+
	Ch-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue/00/Lang.		Blue / Prime Video / Random
	Mute		Mute / Dimmer
	Rec		Rec / Rec Mode
	Source		AV / Input / RDS
	Option		Setup / OPT /
	Subt.		Subtitle / EQ
	Iptv		Display / Media
	Eco/Search		Fav / Marker / PC
	Guide/ Popup		Guide / EPG / -/--
	Ch.List		Shift + Smart / List
	Info		Info / Angle





Original		Rechange	
1	1	TV 1	1
2 ARC	2	DVD 2	2
3 DEF	3	CD - STB 3	3
4 DIS	4	VIDEO 4	4
5 INL	5	TAPE 5	5
6 HND	6	TUNER 6	6
7 PORS	7	AUX - HDD 7	7
8 TUV	8	USB 8	8
9 NXYZ	9	BLUETOOTH 9	9
DISC MENU	Disc Menu	TOP MENU D.MENU	D.Menu / Top
0	0	HDMI - BAT 0	0
TEXT MEDIA CENTER	Text/ Media	GOTO TEXT	Text / Goto
SOUND	Sound	TITLE SOUND	Sound / Title
■ ↑ ↓ → ←		SIZE ZOOM	Zoom / Size
REPEAT	Repeat	SHIFT + APP REPEAT	Shift + Green / APP /

Original		Rechange	

