

 
 
 
 





 


 
 
 


 


 
 




 


 

 




 





Original		Rechange		Original		Rechange	
	Power		Power		Info		Info
	Tv/Radio		TV/R		Exit		Exit
	Mute		Mute		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		OK		Ok
	5		5		CH+		Ch +
	6		6		CH-		Ch -
	7		7		Vol+		Vol +
	8		8		Vol-		Vol -
	9		9		Red/F1		Red
	0		0		Green/F2		Green
	EPG		Guide		Yellow/F3		Yellow
	Recall		Back		Blue/F4		Blue
	Menu		Menu		Subt		Subt
	FAV		Pre Ch		Audio		Dual







Original	Recharge	Original	Recharge
On/Off		Power	
Mute		Mute	
Update		Smart	
Subt.List		Subt	
Info		Info	
Sleep Timer		Sleep	
Return TV		TV/R	
Text		Text	
Menu		Menu	
Menu Up		Up	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Menu Off		Exit	
Menu Down		Down	
Back		Back	
Volume+		Vol +	
Chan.Up		Ch +	
Volume-		Vol -	
Menu audio		Dual	
Chan.Down		Ch -	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
Guide -/-- 1.		Guide	
0/10		0	
Red		Red	
Green		Green	





