















	Original	Recharge
	Power On	 Power
	Mute	 Mute
	TV/Radio	 TV/R
	FAV	 Pre Ch
	TV/DBS	 Smart
	VCR/DBS	 Media
	1	 1
	2	 2
	3	 3
	4	 4
	5	 5
	6	 6
	7	 7
	8	 8
	9	 9
	0	 0
	Find	 3D

	Original	Recharge
	Recall	 Back
	Up / CH+	 Up
	Up / CH+	 Ch +
	Down / CH-	 Down
	Down / CH-	 Ch -
	Right / Vol+	 Right
	Right / Vol+	 Vol +
	Left / Vol-	 Left
	Left / Vol-	 Vol -
	OK / List	 Ok
	OK / List	 List
	Menu	 Menu
	Exit	 Exit
	PG/UP	 >>
	PG/DW	  <<
	Red / Pause	 Red
	Red / Pause	 Pause





	Original	Rechange
	Green / Zoom	B Green
	Green / Zoom	ZOOM Eject
	Yellow / T/Text	C Yellow
	Yellow / T/Text	REPEAT TEXT Text
	Blue / Timer	D Blue
	Blue / Timer	SHIFT +  TIMER AV Shift + AV
	White / Edit	SETTINGS OPT Options
	Sub.T	AD SUBT Subt
	Audio	SOUND DUAL Dual
	Info	DISPLAY INFO Info
	Signal	PROG SLEEP Sleep
	F1	SHIFT +  1 Shift + 1
	F2	SHIFT +  2 Shift + 2
	[-]	E-MANUAL D.MENU D. Menu
	EPG	EPG GUIDE Guide
	SAT	TIMER AV AV
	Format	PICTURE FORMAT Format

	Original	Rechange

