






 






 







 





 











 







 



 



 

 


 
 



 




Original	Rechange	Original	Rechange
 Power	 Power	 Menu / Sel	 Menu
 Mute	 Mute	 Menu / Sel	 Ok
 TV / Video	 TV/R	 Exit	 Exit
 V.Size	 Eject	 Up / PG+	 Up
 PIP	 Smart	 Up / PG+	 Ch +
 1	 1	 Down / PG-	 Down
 2	 2	 Down / PG-	 Ch -
 3	 3	 Right / Vol+	 Right
 4	 4	 Right / Vol+	 Vol +
 5	 5	 Left / Vol-	 Left
 6	 6	 Left / Vol-	 Vol -
 7	 7	 MTS	 Media
 8	 8	 PG Info	 Info
 9	 9	 Still	 Pause
 0	 0	 Picture	 Format
 Text	 Text	 Sound	 Dual
 Pre Pg	 Pre Ch	 Sleep	 Sleep





	Original	Rechange		Original	Rechange
	Bright		Options		
	Red / Erase		Red		
	Time		AV		
	Green / Skip		Green		
	Yellow / Insert		Yellow		
	Blue / Replace		Blue		

	Original	Rechange

