
 
 






 

 






 

 




 
 


 










Original	Rechange	Original	Rechange
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Pause	Menu Off	 Exit
Subt.List	 Subt	Menu Down	 Down
Reveal	 Play	Back	 Back
Sleep Timer	 Sleep	Menu audio	 Dual
Txt Stop	 Stop	Volume+	 Vol +
Return TV	 TV/R	Chan.Up	 Ch +
Info	 Info	Volume-	 Vol -
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Menu Left	 Left	6	 6
Display	 Shift + Info	7	 7



Original	Recharge
8	 8
9	 9
Guide -/-- 1.	 Guide
0/10	 0
2.Fav P/C 2.	 Pre Ch
Mix Scan	 +  Shift + Media
Off/Tim	 +  Shift + List
Bright+ Mode	 Options
On/Tim	 List
Color+ P.Std	 Format
Aft/Caf	 +  Shift + Smart
Rotate Text	 +  Shift + Format
Tone-	 I<<
Audio-	 +  Shift + Vol -
Store	 Smart
Audio+	 +  Shift + Vol +
Color- S.Std	 +  Shift + Dual

Original	Recharge
Tune-	 <<
Red	 Red
Tune+	 >>
Green	 Green
Yellow	 Yellow
Tone+	 >>I
Blue	 Blue
Store Text	 +  Shift + Text
AV 2	 +  Shift + AV
Browse	 Media
Search	 +  Shift + TV/R
Disp	 3D
Contrast+	 +  Shift + Ch +
Contrast-	 +  Shift + Ch -
Surround	 +  Shift + Red
Nicam/Mono	 +  Shift + Green
Level L	 +  Shift + Yellow



Original	Recharge	Original	Recharge
Level R/Woofer	 +  Shift + Blue		

