


 










 


 






Original	Rechange
 Power	 Power
 TV/AV/S	 AV
 Mute	 Mute
 Video Mode	 Options
 Audio Mode	 Shift + Subt
 Display	 Shift + Info
 Off Timer	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Rechange
 -/--	 Guide
 CH RTN	 Pre Ch
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Teletext	 Text
 Subpage	 Subt
 Index	 Info
 Zoom	 Eject
 Hold	 Pause
 Surround	 3D
 Exit	 Exit





Original	Recharge	Original	Recharge
 Up	 Up		
 Right	 Right		
 Down	 Down		
 Left	 Left		
 Menu	 Menu		
 Menu	 Ok		
 Sound	 Shift + Dual		
 AI Audio	 Dual		
 Scart	 TV/R		
 Component	 Back		
 PC/HDMI	 Media		
 Wide	 Format		
 PIP/POP	 Smart		
 Sub Source	 Shift + AV		

