






 


 



 






 


 


 




 

 





 
 

 















Original	Rechange	Original	Rechange
 Power	 Power	 Vol -	 Vol -
 TV / Radio	 TV/R	 PG+	 Ch +
 Mute	 Mute	 PG-	 Ch -
 i	 Info	 1	 1
 ALT	 Back	 2	 2
 M/A	 Smart	 3	 3
 Teletext	 Text	 4	 4
 Exit	 Exit	 5	 5
 Menu	 Menu	 6	 6
 FAV	 Pre Ch	 7	 7
 P/L	 Media	 8	 8
 Up	 Up	 9	 9
 Left	 Left	 0	 0
 OK	 Ok		
 Right	 Right		
 Down	 Down		
 Vol +	 Vol +		

