



	Original	Rechange		Original	Rechange
	Power	Power		0	0
	Mute	Mute / Dimmer		-/--	Guide / EPG / -/--
	FAV / Eject	Fav / Marker / PC		Recall	Back / Return
	FAV / Eject	Eject / Surround		Setup	Setup / OPT /
	P.Mode	Picture / Format		Exit	Exit / Cancel / Clear
	S.Mode	Sound / Title		Call	Smart / List
	Sleep	Sleep / Timer		Source	AV / Input / RDS
	Scaler	Menu / Home		Up	Up
	1	1		Left	Left
	2	2		OK	OK
	3	3		Right	Right
	4	4		Down	Down
	5	5		CH-	CH- / Page-
	6	6		CH+	CH+ / Page+
	7	7		Vol-	Vol-
	8	8		Vol+	Vol+
	9	9		Text / Play	Text / Goto





Original	Rechange
Text / Play	Play / Slow
Mix / Pause/Play	Pause / Step / Freeze
Index / Stop	Stop / Hold
I/II	Shift + Audio / Lang I/II
Cancel / <<	Shift + Exit / Cancel / Clear
Cancel / <<	<< / Tune-
Reveal / >>	>> / Tune+
Hold / I<<	I<< / Preset-
Hold / I<<	Shift + Stop /
Size / >>I	>>I / Preset+
Size / >>I	Zoom / Size
Red / Goto	Red / Netflix / Search
Red / Goto	Shift + Text /
Green / A-B	Green / APP / Repeat
Green / A-B	Shift + Yellow / YouTube /
Yellow / Repeat	Yellow / YouTube / Repeat
Yellow / Repeat	Shift + Green / APP / Repeat

Original	Rechange
Blue / Angle	Blue / Prime Video / Random
Blue / Angle	Info / Angle
S.Page /	D.Menu / Top
Page- / Title	Shift + Sound / Title
Page- / Title	Shift + CH- /
Page+ / PBC	Shift + CH+ /
Audio	Audio / Lang I/II
i / Display	Display / Media
Radio / Zoom-	TV/Radio /
Radio / Zoom-	Shift + Down
EPG / Zoom+	Shift + Up
EPG / Zoom+	Shift + Guide / EPG / -/-
S.Title / Subtitle	Subtitle / EQ

