



| Original   | Recharge  | Original   | Recharge   |
|--|---|--|--|
|  Power        |  Power                           |  Info       |  Info / Angle           |
|  Mute         |  Mute / Dimmer                   |  [ I ]/Menu |  Menu / Home            |
|  Red          |  Red / Netflix / Search          |  Up         |  Up                     |
|  Green        |  Green / APP / Repeat            |  Source     |  AV / Input / RDS       |
|  Yellow       |  Yellow / YouTube / Repeat       |  Left       |  Left                   |
|  Blue         |  Blue / Prime Video / Random     |  OK         |  OK                     |
|  << / [≡o]    |  << / Tune-                      |  Right      |  Right                  |
|  >> / [≡?]    |  >> / Tune+                      |  Down       |  Down                   |
|  I<< / [≡+]   |  I<< / Preset-                   |  EPG        |  Guide / EPG / -/-      |
|  >>I / [≡..] |  >>I / Preset+                  |  Exit      |  Exit / Cancel / Clear |
|  Play       |  Play / Slow                   |  Vol+     |  Vol+                 |
|  Pause      |  Pause / Step / Freeze         |  FAV      |  Fav / Marker / PC    |
|  Stop       |  Stop / Hold                   |  CH+      |  CH+ / Page+          |
|  [≡i]       |  Smart / List                  |  Vol-     |  Vol-                 |
|  Text       |  Text / Goto                   |  REC      |  Rec / Rec Mode       |
|  Subtitle   |  Subtitle / EQ                 |  CH-      |  CH- / Page-          |
|  Freeze     |  Shift + Pause / Step / Freeze |  1        |  1                    |




















| Original |        | Rechange        |                   | Original |  | Rechange |  |
|----------|--------|-----------------|-------------------|----------|--|----------|--|
| 2        | 2      | DVD 2           | 2                 |          |  |          |  |
| 3        | 3      | CD - STB 3      | 3                 |          |  |          |  |
| 4        | 4      | VIDEO 4         | 4                 |          |  |          |  |
| 5        | 5      | TAPE 5          | 5                 |          |  |          |  |
| 6        | 6      | TUNER 6         | 6                 |          |  |          |  |
| 7        | 7      | AUX - HDD 7     | 7                 |          |  |          |  |
| 8        | 8      | USB 8           | 8                 |          |  |          |  |
| 9        | 9      | BLUETOOTH 9     | 9                 |          |  |          |  |
| AUDIO    | Audio  | LANG I/II AUDIO | Audio / Lang I/II |          |  |          |  |
| 0        | 0      | HDMI - SAT 0    | 0                 |          |  |          |  |
| RECALL   | Recall | RETURN BACK     | Back / Return     |          |  |          |  |
|          |        |                 |                   |          |  |          |  |
|          |        |                 |                   |          |  |          |  |
|          |        |                 |                   |          |  |          |  |
|          |        |                 |                   |          |  |          |  |
|          |        |                 |                   |          |  |          |  |
|          |        |                 |                   |          |  |          |  |
|          |        |                 |                   |          |  |          |  |
|          |        |                 |                   |          |  |          |  |
|          |        |                 |                   |          |  |          |  |
|          |        |                 |                   |          |  |          |  |
|          |        |                 |                   |          |  |          |  |
|          |        |                 |                   |          |  |          |  |
|          |        |                 |                   |          |  |          |  |
|          |        |                 |                   |          |  |          |  |
|          |        |                 |                   |          |  |          |  |















 




 

| Original  | Recharge  | Recharge              |
|-----------|---|-----------------------|
| Power     |    | Power                 |
| Mute      |    | Mute / Dimmer         |
| Play      |    | Play / Slow           |
| Pause     |    | Pause / Step / Freeze |
| Stop      |    | Stop / Hold           |
| Rec       |    | Rec / Rec Mode        |
| <</Hold   |    | << / Tune-            |
| >>/Index  |    | >> / Tune+            |
| I<<       |    | I<< / Preset-         |
| >>I       |    | >>I / Preset+         |
| Nicam/A2  |  | Audio / Lang I/II     |
| Subtitle  |  | Subtitle / EQ         |
| Subpage   |  | Eject / Surround      |
| Size      |  | Zoom / Size           |
| Sleep     |  | Sleep / Timer         |
| DTV/Radio |  | TV/Radio /            |
| Reveal    |  | D.Menu / Top          |

| Original | Recharge  | Recharge              |
|----------|---|-----------------------|
| TXT/MIX  |    | Text / Goto           |
| Menu     |    | Menu / Home           |
| Up       |    | Up                    |
| Info     |    | Info / Angle          |
| Left     |    | Left                  |
| Enter    |    | OK                    |
| Right    |    | Right                 |
| Cancel   |    | Exit / Cancel / Clear |
| Down     |    | Down                  |
| Back     |    | Back / Return         |
| Vol+     |  | Vol+                  |
| List     |  | Smart / List          |
| CH+      |  | CH+ / Page+           |
| Vol-     |  | Vol-                  |
| Mode     |  | Display / Media       |
| CH-      |  | CH- / Page-           |
| 1        |  | 1                     |






































| Original | Recharge  |   |
|----------|---|---|
| 2        |  2                             | 2 |
| 3        |  3                             | 3 |
| 4        |  4                             | 4 |
| 5        |  5                             | 5 |
| 6        |  6                             | 6 |
| 7        |  7                             | 7 |
| 8        |  8                             | 8 |
| 9        |  9                             | 9 |
| EPG      |  Guide / EPG / -/--            |   |
| 0        |  0                             | 0 |
| FAV      |  Fav / Marker / PC             |   |
| Red      |  Red / Netflix / Search      |   |
| Green    |  Green / APP / Repeat        |   |
| Yellow   |  Yellow / YouTube / Repeat   |   |
| Blue     |  Blue / Prime Video / Random |   |
| <</Hold  |  Shift + Stop /              |   |
| FAV-     |  Shift + Left                |   |

| Original | Recharge   |  |
|----------|--|--|
| FAV+     |  Shift + Right              |  |
| -/--     |  Shift + Guide / EPG / -/-- |  |
|          |  |  |
|          |  |  |
|          |  |  |
|          |  |  |
|          |  |  |
|          |  |  |
|          |  |  |
|          |  |  |
|          |  |  |
|          |  |  |
|          |  |  |
|          |  |  |
|          |  |  |
|          |  |  |
|          |  |  |
|          |  |  |
|          |  |  |
|          |  |  |
|          |  |  |
|          |  |  |















 


| Original   | Rechange  | Original | Rechange  |
|------------|---|----------|---|
| Power      |  Power                 | Up       |  Up                    |
| Mute       |  Mute / Dimmer         | Info     |  Info / Angle          |
| Play       |  Play / Slow           | Left     |  Left                  |
| Pause      |  Pause / Step / Freeze | Ok       |  OK                    |
| Stop       |  Stop / Hold           | Right    |  Right                 |
| Rec        |  Rec / Rec Mode        | Exit     |  Exit / Cancel / Clear |
| <</[Timer] |  << / Tune-            | Down     |  Down                  |
| >>/[≡?]    |  >> / Tune+            | Recall   |  Back / Return         |
| I<</[≡⇅]   |  I<< / Preset-         | Vol+     |  Vol+                  |
| >>I/[≡...] |  >>I / Preset+         | [≡i]     |  Smart / List          |
| Audio      |  Audio / Lang I/II    | Ch+      |  CH+ / Page+          |
| Subtitle   |  Subtitle / EQ       | Vol-     |  Vol-                |
| I<</[≡⇅]   |  Zoom / Size         | Ch-      |  CH- / Page-         |
| <</[Timer] |  Sleep / Timer       | 1        |  1                   |
| Text       |  Text / Goto         | 2        |  2                   |
| Source/Av  |  AV / Input / RDS    | 3        |  3                   |
| [II]       |  Menu / Home         | 4        |  4                   |

| Original   | Rechange  | Original | Rechange  |
|------------|---|----------|---|
| Power      |  Power               | Up       |  Up                    |
| Mute       |  Mute / Dimmer       | Info     |  Info / Angle          |
| Play       |  Play / Slow           | Left     |  Left                  |
| Pause      |  Pause / Step / Freeze | Ok       |  OK                    |
| Stop       |  Stop / Hold           | Right    |  Right                 |
| Rec        |  Rec / Rec Mode        | Exit     |  Exit / Cancel / Clear |
| <</[Timer] |  << / Tune-            | Down     |  Down                  |
| >>/[≡?]    |  >> / Tune+            | Recall   |  Back / Return         |
| I<</[≡⇅]   |  I<< / Preset-         | Vol+     |  Vol+                  |
| >>I/[≡...] |  >>I / Preset+         | [≡i]     |  Smart / List          |
| Audio      |  Audio / Lang I/II    | Ch+      |  CH+ / Page+          |
| Subtitle   |  Subtitle / EQ       | Vol-     |  Vol-                |
| I<</[≡⇅]   |  Zoom / Size         | Ch-      |  CH- / Page-         |
| <</[Timer] |  Sleep / Timer       | 1        |  1                   |
| Text       |  Text / Goto         | 2        |  2                   |
| Source/Av  |  AV / Input / RDS    | 3        |  3                   |
| [II]       |  Menu / Home         | 4        |  4                   |





| Original | Recharge  | Original | Recharge |
|----------|---|----------|----------|
| 5        |  5                             |          |          |
| 6        |  6                             |          |          |
| 7        |  7                             |          |          |
| 8        |  8                             |          |          |
| 9        |  9                             |          |          |
| Epg      |  Guide / EPG / -/--            |          |          |
| 0        |  0                             |          |          |
| Fav      |  Fav / Marker / PC             |          |          |
| Red      |  Red / Netflix / Search        |          |          |
| Green    |  Green / APP / Repeat          |          |          |
| Yellow   |  Yellow / YouTube / Repeat   |          |          |
| Blue     |  Blue / Prime Video / Random |          |          |
| Freeze   |  Shift + Pause / Step /      |          |          |
|          |   |          |          |
|          |   |          |          |
|          |   |          |          |
|          |   |          |          |
|          |   |          |          |

