 



 











 

 

 

 

 

 

 

 











Original	Recharge	Original	Recharge
	 Play / Slow	 8	 8
	 Pause / Step / Freeze	 9	 9
	 CH- / Page-		
	 CH+ / Page+		
	 Subtitle / EQ		
	 Vol-		
	 Vol+		
	 0		
	 I<< / Preset-		
	 >>I / Preset+		
	 1		
	 2		
	 3		
	 4		
	 5		
	 6		
	 7		

