

 



 




 

 


 





 

 



 

 


 

 




 




Original	Rechange
 Power	 Power
 Screen	 Picture / Format
 Lang	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 www	 Smart / List
 Red/▲	 Red / Netflix / Search
 Red/▲	 Shift + CH+ /
 Green/▼	 Green / APP / Repeat
 Green/▼	 Shift + CH- /
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Original	Rechange
 7	 7
 8	 8
 [≡]/Text	 Text / Goto
 9	 9
 0	 0
 Recall	 Back / Return
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 Right	 Right
 Return	 Shift + Back / Return
 Down	 Down
 OK	 OK
 Source	 AV / Input / RDS
 FAV	 Fav / Marker / PC
 Presets	 Setup / OPT /
 Sleep	 Sleep / Timer





Original		Recharge		Original		Recharge	
	Vol+		Vol+				
	P+		CH+ / Page+				
	Info		Info / Angle				
	Mute		Mute / Dimmer				
	EPG		Guide / EPG / -/--				
	Vol-		Vol-				
	P-		CH- / Page-				

