


 







 


 




 
 

 
 










 




 



 



 





 















Original	Rechange	Original	Rechange
 Power	 Power	 Right	 Right
 TV	 TV/R	 Left	 Left
 1	 1	 Menu	 Menu
 2	 2	 Exit	 Exit
 3	 3	 Home	 Smart
 4	 4	 Info	 Info
 5	 5	 Favorite	 Shift + Pre Ch
 6	 6	 Mute	 Mute
 7	 7	 Input	 AV
 8	 8	 Vol+	 Vol +
 9	 9	 Vol-	 Vol -
 0	 0	 CH+	 Ch +
 .	 Guide	 CH-	 Ch -
 Recall	 Pre Ch	 Picture	 Format
 Enter	 Ok	 Zoom	 Eject
 Up	 Up	 Audio	 Shift + Dual
 Down	 Down	 CCD	 Subt





Original	Recharge	Original	Recharge
 Play	 Play		
 Pause	 Pause		
 Stop	 Stop		
 <<<	 <<<		
 >>>	 >>>		
 <<<	 <<<		
 >>>	 >>>		
 MTS/SAP	 Dual		
 CH List	 List		
 Sleep	 Sleep		
 Video	 Red		
 HDMI	 Green		
 ACC	 Yellow		

