





 

 











 









 

















 




 




Original	Rechange
 Standby	 Power
 Mute	 Mute / Dimmer
 Source	 AV / Input / RDS
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Audio I/II	 Audio / Lang I/II
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0







 

 











 









 



Original	Rechange
 FAV	 Fav / Marker / PC
 Recall	 Back / Return
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Auto	 Smart / List
 Display	 Display / Media
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Vol-	 Vol-
 Vol+	 Vol+
 CH-	 CH- / Page-
 CH+	 CH+ / Page+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat









Original	Rechange
 Standby	 Power
 Mute	 Mute / Dimmer
 Source	 AV / Input / RDS
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Audio I/II	 Audio / Lang I/II
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Rechange
 Recall	 Back / Return
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Display	 Display / Media
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Vol-	 Vol-
 Vol+	 Vol+
 CH-	 CH- / Page-
 CH+	 CH+ / Page+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random



