


















 


 





















 

 



 







Original	Recharge
 Power	 Power
 Back	 Back / Return
 *	 Setup / OPT /
 Home	 Menu / Home
 Browser	 D.Menu / Top
 Up	 Up
 Play/Pause	 Play / Slow
 <<	 << / Tune-
 >>	 >> / Tune+
 Open/Close	 Eject / Surround
 Search	 Red / Netflix / Search
 Left	 Left
 OK	 OK
 Right	 Right
 Stop	 Stop / Hold
 Vol-	 Vol-
 Vol+	 Vol+

Original	Recharge
 Mute	 Mute / Dimmer
 Down	 Down
 Info	 Info / Angle
 I<<	 I<< / Presets-
 >>I	 >>I / Presets+
 FN	 Text / Goto
 Caps Lock	 AV / Input / RDS
 Movie	 Subtitle / EQ
 Photo	 Picture / Format
 Music	 Sound / Title
 Shift	 Blue / Prime Video / Random

