






 








 





 


 


 


 


 


 
 













 
 




	Original	Rechange		Original	Rechange
	Power		Power		Right
	Mute		Mute		Left
	PR List		List		Ok
	Memory		Media		P.Adj
	FAV		Pre Ch		Audio
	TV/Radio		TV/R		1
	Teletext		Text		2
	Guide		Guide		3
	Pause		Pause		4
	Info		Info		5
	Menu		Menu		6
	Subtitle		Subt		7
	Exit		Exit		8
	Up / CH+		Up		9
	Up / CH+		Ch +		0
	Down / CH-		Down		-/--
	Down / CH-		Ch -		Recall
					SHIFT +  Shift + Guide
					Back



