



 

















 






















 

























Original		Rechange		Original		Rechange	
	Power		Power		0		0
	Mute		Mute / Dimmer		+10		Guide / EPG / -/-
	L/R/ST		D.Menu / Top		Clear		Exit / Cancel / Clear
	Open / Close		Eject / Surround		Menu		Menu / Home
	NTSC / PAL		Picture / Format		Up		Up
	1		1		Search		Red / Netflix / Search
	2		2		Left		Left
	3		3		Enter		OK
	Angle		Info / Angle		Right		Right
	4		4		Set Up		Setup / OPT /
	5		5		Down		Down
	6		6		Play		Play / Slow
	Audio		Audio / Lang I/II		Title		Sound / Title
	7		7		Pause		Pause / Step / Freeze
	8		8		Stop		Stop / Hold
	9		9		PBC		Smart / List
	Subtitle		Subtitle / EQ		Return		Back / Return





	Original	Recharge	Original	Recharge
	I<< Skip	I<< / Preset-		
	Skip >>I	>>I / Preset+		
	Slow	Shift + Play /		
	Program	TV/Radio /		
	<< Scan	<< / Tune-		
	Scan >>	>> / Tune+		
	Repeat	Green / APP / Repeat		
	AB	Yellow / YouTube / Repeat		
	Zoom	Zoom / Size		
	Step	Shift + Pause / Step /		
	Vol-	Vol-		
	Vol+	Vol+		
	Display	Display / Media		
	Key-	CH- / Page-		
	Key+	CH+ / Page+		

