



 









































 

























Original		Rechange		Original		Rechange	
	Power		Power		0		0
	Mute		Mute / Dimmer		+10		Guide / EPG / -/-
	L/R/ST		D.Menu / Top		Clear		Exit / Cancel / Clear
	Open / Close		Eject / Surround		Menu		Menu / Home
	NTSC / PAL		Picture / Format		Up		Up
	1		1		Search		Red / Netflix / Search
	2		2		Left		Left
	3		3		Enter		OK
	Angle		Info / Angle		Right		Right
	4		4		Set Up		Setup / OPT /
	5		5		Down		Down
	6		6		Play		Play / Slow
	Audio		Audio / Lang I/II		Title		Sound / Title
	7		7		Pause		Pause / Step / Freeze
	8		8		Stop		Stop / Hold
	9		9		PBC		Smart / List
	Subtitle		Subtitle / EQ		Return		Back / Return





Original	Rechange
I<< Skip	I<< / Preset-
Skip >>I	>>I / Preset+
Slow	Shift + Play /
Program	TV/Radio /
<< Scan	<< / Tune-
Scan >>	>> / Tune+
Repeat	Green / APP / Repeat
AB	Yellow / YouTube / Repeat
Zoom	Zoom / Size
Step	Shift + Pause / Step /
Vol-	Vol-
Vol+	Vol+
Display	Display / Media
Key-	CH- / Page-
Key+	CH+ / Page+

Original	Rechange

