

 
 
 




 
 

 
 

 
 

 
 
 
 
 
 


 
 


 

 


 
 

 
 


 
 



 

 
 
 



 

 
 
 

 

 
 







Original	Recharge	Original	Recharge
 Power	 Power	 Right	 Right
 Source	 AV	 Down	 Down
 TV	 TV/R	 Left	 Left
 Quick	 Shift + Pre Ch	 OK	 Ok
 ECO	 Shift + 3D	 Red	 Red
 List	 List	 Green	 Green
 Vol+	 Vol +	 Yellow	 Yellow
 Vol-	 Vol -	 Blue	 Blue
 AD	 Shift + Subt	 1	 1
 Mute	 Mute	 2	 2
 P+	 Ch +	 3	 3
 P-	 Ch -	 4	 4
 Menu	 Menu	 5	 5
 Guide	 Guide	 6	 6
 Exit	 Exit	 7	 7
 Back	 Back	 8	 8
 Up	 Up	 9	 9





Original		Rechange		Original		Rechange	
	0		0		[v]		Smart
	[i+]		Info		[>]		Sleep
	Recall		Pre Ch		-> [/] <-		Shift + Text
	[≡+]		Options		V.Format		Format
	[≡◇]		Shift + Format		Audio I/II		Dual
	Play		Play		More Info		Shift + Info
	<<		<<		Subtitle		Subt
	>>		>>				
	<<		<<				
	>>		>>				
	Stop		Stop				
	Rec		Rec				
	Pause/Step		Pause				
	[≡?]		D. Menu				
	[O]/[≡X]		Shift + AV				
	Text		Text				
	3D		3D				

