



| Original | Recharge | Original | Recharge |
|---------------|-----------------------------|------------|-------------------|
| Guide | Guide / EPG / -/-- | | Play |
| Power | Power | | Pause |
| Eject | Eject / Surround | | << / Tune- |
| Tv/Radio | TV/Radio / | | >> / Tune+ |
| Red/Goto | Red / Netflix / Search | D.Setup | Setup / OPT / |
| Green/Angle | Green / APP / Repeat | Rec | Rec / Rec Mode |
| Yellow/Repeat | Yellow / YouTube / Repeat | Stop | Stop / Hold |
| Blue/A-B | Blue / Prime Video / Random | I<< | I<< / Preset- |
| FAV | Fav / Marker / PC | >>I/Index | >>I / Preset+ |
| Text | Text / Goto | Menu | Menu / Home |
| Freeze/Hold | Shift + Pause / Step / | Lang/Audio | Audio / Lang I/II |
| D.Menu | D.Menu / Top | | Up |
| Subtitle | Subtitle / EQ | | Left |
| Zoom/Size | Zoom / Size | | OK |
| Aspect | Shift + Picture / Format | | Right |
| Subpage | Info / Angle | | Sleep |
| Media | Shift + Display / Media | | Down |

| Original | Recharge |
|----------|-----------------------|
| | Play / Slow |
| | Pause / Step / Freeze |
| | << / Tune- |
| | >> / Tune+ |
| | Setup / OPT / |
| | Rec / Rec Mode |
| | Stop / Hold |
| | I<< / Preset- |
| | >>I / Preset+ |
| | Menu / Home |
| | Audio / Lang I/II |
| | Up |
| | Left |
| | OK |
| | Right |
| | Sleep / Timer |
| | Down |





| Original | Rechange |
|----------|-------------------------------|
| | Exit / Cancel / Clear |
| | Vol+ |
| | Mute / Dimmer |
| | CH+ / Page+ |
| | Vol- |
| | Display / Media |
| | CH- / Page- |
| | 1 |
| | 2 |
| | 3 |
| | 4 |
| | 5 |
| | 6 |
| | 7 |
| | 8 |
| | 9 |
| | + Shift + Guide / EPG / -/-- |

| Original | Rechange |
|----------|------------------|
| | 0 |
| | Back / Return |
| | AV / Input / RDS |
| | Picture / Format |
| | Sound / Title |

