 









 

 






 
 

 

 



 



 
 


 



 



 










 
 















Original		Rechange		Original		Rechange	
	Power		Power		Vol-		Vol-
	Mute		Mute / Dimmer		Prog		Shift + TV/Radio / Program
	1		1		CH-		CH- / Page-
	2		2		Aspect		Shift + Picture / Format
	3		3		S.Mode		Sound / Title
	4		4		P.Mode		Picture / Format
	5		5		Guide/Title		Guide / EPG / -/--
	6		6		Guide/Title		Shift + Sound / Title
	7		7		Menu		Menu / Home
	8		8		Up		Up
	9		9		Input		AV / Input / RDS
	List		Smart / List		Left		Left
	0		0		OK		OK
	Recall		Back / Return		Right		Right
	Vol+		Vol+		Freeze		Shift + Pause / Step /
	Sleep		Sleep / Timer		Down		Down
	CH+		CH+ / Page+		Exit		Exit / Cancel / Clear





Original	Rechange
i	Info / Angle
FAV/Setup	Fav / Marker / PC
FAV/Setup	Setup / OPT /
Tv/RD/Angle	Shift + Info / Angle
Tv/RD/Angle	TV/Radio /
AD	Audio / Lang I/II
Text/Menu	Text / Goto
Text/Menu	D.Menu / Top
↑	Shift + Up
S	Display / Media
Zoom / Rec	Zoom / Size
Zoom / Rec	Rec / Rec Mode
←/Cancel	Shift + Left
←/Cancel	Shift + Exit / Cancel / Clear
OK/Mix	Shift + OK
→/Size	Shift + Right
→/Size	Shift + Zoom / Size

Original	Rechange
Stop	Stop / Hold
Eject	Eject / Surround
↓	Shift + Down
Play	Play / Slow
Pause/Step	Pause / Step / Freeze
I<</Hold	I<< / Preset-
I<</Hold	Shift + Stop /
>>I/Reveal	>>I / Preset+
<</Subpage	<< / Tune-
>>/Index	>> / Tune+
Red/Goto	Shift + Text /
Red/Goto	Red / Netflix / Search
Green/Slow	Green / APP / Repeat
Green/Slow	Shift + Play /
Yellow/Repeat	Shift + Green / APP /
Yellow/Repeat	Yellow / YouTube / Repeat
Blue/A-B	Shift + Yellow / YouTube / Repeat









Original

Rechange

	Blue/A-B		Blue / Prime Video / Random

Original

Rechange