




 













 

 







 





 

 
 

 

 
 





 


 







 
 

 
 

 





Original	Rechange
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 (i)	 Info
 AV	 AV
 Red	 Red
 Green	 Green
 Yellow	 Yellow

Original	Rechange
 Blue	 Blue
 TV	 TV/R
 Menu	 Menu
 [≡]/Top Menu	 Text
 Back	 Back
 P+	 Ch +
 P-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 ↑/[+]	 Pre Ch
 F.T/L	 Options
 [?]	 3D





Original	Recharge	Original	Recharge
	[◆]		Format
	↓/[]		Guide
	>		D. Menu
	[X]		Exit
	[≡i]		Media
	Zoom		Eject
	(↔)		Smart
	[]/♪		Dual
	[++]		Subt




 


 

 



	Original	Recharge	Original	Recharge
	Power			
	(i)			
	Menu			
	Up			
	Down			
	Right			
	Left			
	OK			
	Top Menu	 + 		
	Back			
	↑/[+]			
	↓/[]			
	<<			
	Play			
	>>			
	Stop			
	Pause			





Original	Recharge	Original	Recharge
 Power	 Power	 >>	 >>
 (i)	 INFO	 Rec	 Rec
 Green	 B	 Stop	 Stop
 Yellow	 C	 Pause	 Pause
 Blue	 D		
 Menu	 MENU		
 Up	 Up		
 Down	 Down		
 Right	 Right		
 Left	 Left		
 OK	 OK		
 Top Menu	 SHIFT +  Shift + Menu		
 Back	 BACK		
 ↓/[]	 GUIDE		
 ↑/[+]	 FAV PRE-CH		
 <<	 <<		
 Play	 PLAY MODE		

Original	Recharge	Original	Recharge
 >>	 >>		
 Rec	 Rec		
 Stop	 Stop		
 Pause	 Pause		





Original	Recharge
Power	Power
Mute	Mute
(i)	Info
Menu	Menu
Up	Up
Down	Down
Right	Right
Left	Left
OK	Ok
Top Menu	Shift + Menu
Back	Back
↑/[+]	Pre Ch
↓/[+]	Guide
<<<	<<<
Play	Play
>>>	>>>
Pause	Pause

Original	Recharge
Stop	Stop
(↔)	Media

