



 
| Original | Rechange |
|------------------|-----------------|
| Standby/On Audio | Power |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |
| 10 | Guide |
| +10/100+ | Pre Ch |
| Sleep | Sleep |
| Play Mode | + Shift + Play |
| DSP Mode | 3D |
| Up | Up |

| Original | Rechange |
|------------------|----------|
| Down | Down |
| Right | Right |
| Left | Left |
| Enter | Ok |
| Vol+ | Vol + |
| Vol- | Vol - |
| Setting | Options |
| DVD Menu | Menu |
| Muting | Mute |
| Theater Position | Media |
| Tv/Video | TV/R |
| <</B.Search | << |
| F.Search/>> | >> |
| I<</Rew/Tuning | I<< |
| Play | Play |
| Stop | Stop |
| Tuning Up/FF/>>I | >>I |





| Original | Rechange |
|--|---|
|  Pause/Strobe |  Pause |
|  Channel+ |  Ch + |
|  Channel- |  Ch - |
|  Subtitle |  Subt |
|  Audio |  Dual |
|  Title |  List |
|  Decode |  AV |
|  Zoom |  Eject |
|  Return |  Back |
|  Display |  Info |
|  Digest |  Text |
|  Angle |  Red |
|  Choice |  Yellow |
|  Time |  Shift + AV |
|  EON Select |  Shift + Up |
|  PTY Search |  Shift + Down |
|  PTY+ |  Shift + Right |

| Original | Rechange |
|--|---|
|  PTY- |  Shift + Left |
|  EON |  Shift + Ok |
|  RDS Display |  Shift + Info |
|  AUX |  Format |
|  FM/AM |  Smart |
|  DVD |  D. Menu |
|  1 AUX-FM/AM |  Shift + 1 |
|  2 AUX-FM/AM |  Shift + 2 |
|  3 AUX-FM/AM |  Shift + 3 |
|  4 AUX-FM/AM |  Shift + 4 |
|  5 AUX-FM/AM |  Shift + 5 |
|  6 AUX-FM/AM |  Shift + 6 |
|  7 AUX-FM/AM |  Shift + 7 |
|  8 AUX-FM/AM |  Shift + 8 |
|  9 AUX-FM/AM |  Shift + 9 |
|  0/FM Mode |  Shift + 0 |
|  10 AUX-FM/AM |  Shift + Guide |








 


 

 





 
 
 





| Original | Recharge | Original | Recharge |
|---|-------------------------------|----------------|----------------|
| <td>+10</td> <td> SHIFT + PRE-CH</td> <td>Shift + Pre Ch</td> | +10 | SHIFT + PRE-CH | Shift + Pre Ch |
| FF/FF>>I UP | Tuning Up/FF/>>>I AUX-FM/AM | SHIFT + >>> | Shift + >>I |
| REW/REW<< DOWN | I<</Rew/Tuning Down AUX-FM/AM | SHIFT + <<< | Shift + I<< |
| MEMORY | Rec/Memory | REC MODE | Rec |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |







 

 
 
 
 
 

 

 
 
 

 


 
 

 
 






 





| Original | Recharge | Original | Recharge |
|--|---|----------|----------|
|  Standby/On Audio |  Power | | |
|  Subwoofer- |  1 | | |
|  Subwoofer+ |  2 | | |
|  Effect |  3 | | |
|  Center- |  4 | | |
|  Center+ |  5 | | |
|  Test |  6 | | |
|  Rear L- |  7 | | |
|  Rear L+ |  8 | | |
|  Rear R- |  GUIDE | | |
|  Rear R+ |  0 | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

| Original | Recharge | Original | Recharge |
|----------|----------|----------|----------|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |



 



 

 


 












 

 
 
 
 
 


 
 
 



 


| Original | Rechange |
|---|--|
|  Standby/On Tv |  Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  10 |  Guide |
|  +10/+100 |  Pre Ch |
|  Tv Return |  Back |
|  Tv Vol+ |  Vol + |
|  Tv Vol- |  Vol - |
|  Channel+ |  Ch + |

| Original | Rechange |
|--|--|
|  Channel- |  Ch - |





| | Original | Rechange |
|---|------------|--|
|  | Standby/On |  Power |
|  | 1 |  1 |
|  | 2 |  2 |
|  | 3 |  3 |
|  | 4 |  4 |
|  | 5 |  5 |
|  | 6 |  6 |
|  | 7 |  7 |
|  | 8 |  8 |
|  | 9 |  9 |
|  | 0 |  0 |
|  | Channel+ |  Ch + |
|  | Channel- |  Ch - |
|  | Play |  Play |
|  | <</Rew |  << |
|  | FF/>> |  >> |
|  | Stop |  Stop |

| | Original | Rechange |
|---|----------|---|
|  | Pause |  Pause |
|  | Rec |  Rec |

