

 


 
 


 
 




 

 
 


 

 
 


 
 

 

 
 
 
 
 
 
 



 

 

 




 





	Original	Rechange	Original	Rechange
	Power			CD2
	1/Clock			CD3
	2/Timer			Play CD
	3			Pause CD
	4/Select-			Stop/Clear CD
	5/Select+			>>I CD
	6			I<< CD
	7			Play Mode
	8/Set			Shift + Play
	9			Sound Mode
	10			Dual
	+10			Active Bass Ex.
	Sleep			Vol +
	AUX			Vol -
	FM Mode			Right
	FM/AM			Left
	CD1			Up
				Down
				Ok



